


## Rechargeable Li-ion Battery Storage System GE-F112/F128-BC-2-A3

---

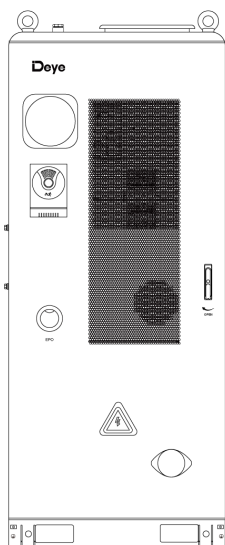

# Preface

This manual provides information on safety, installation, electrical connection, operation, maintenance, and other relevant aspects of the product.

In this manual, the terms “equipment”, “device”, and “product” refer to the product or its components; the terms “manufacturer”, “producer”, and “the Company” refer to NINGBO DEYE ESS TECHNOLOGY CO., LTD. (hereinafter referred to as the “Company”) or its authorized agents.

The illustrations in this manual are for reference only and may differ from the actual product. The Company reserves the right to modify the content without prior notice. For the latest version, please visit our official website or contact our after-sales service.

The Company assumes no liability for any losses arising outside the scope of the warranty policy.

## Copyright




Copyright © 2026 NINGBO DEYE ESS TECHNOLOGY CO., LTD. All rights reserved.

No part of this manual may be reproduced, distributed, modified, or translated in any form or by any means without the prior written permission of the Company.

## Trademarks

All DEYE trademarks used in this manual in any form are the property of the Company. Any other trademarks, registered trademarks, logos or service marks mentioned in this manual are the property of their respective owners.

## Convention

Symbols	Description
 <b>DANGER</b>	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 <b>WARNING</b>	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 <b>CAUTION</b>	Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.
<b>NOTE</b>	Indicates supplementary explanation, clarification, or emphasis on a particular content for better understanding.



NINGBO DEYE ESS TECHNOLOGY CO., LTD. hereby confirms that the products described in this document comply with the fundamental requirements and other relevant provisions of the applicable EU directives.

## Technical Assistance

Add.: 6F No.8 building, No.568 Rixian South Road, Cixi Binhai Economic Development Zone, Zhejiang, P.R. China

Tel.: 0086 0574-63702591

E-mail: [service-ess@deye.com.cn](mailto:service-ess@deye.com.cn)















# Contents





1 Safety.....	1
1.1 Symbols.....	1
1.2 Safety Precautions.....	2
2 Product Introduction.....	6
2.1 Product Overview.....	6
2.2 Application Scenarios.....	6
2.3 Product Appearance.....	7
2.4 Internal Structure.....	9
2.4.1 Battery Pack.....	11
2.4.2 PDU.....	11
2.4.3 Fire Protection System.....	13
2.4.4 Air Conditioner.....	15
3 Transportation.....	16
3.1 Transportation Precautions.....	16
3.2 Transportation Methods.....	18
3.2.1 Forklift.....	18
3.2.2 Hoisting.....	19
4 Installation.....	21
4.1 Pre-Installation Preparation.....	21
4.1.1 Site Requirements.....	21
4.1.2 Foundation Requirements.....	25
4.1.3 Tool Requirements.....	27
4.2 Packing List.....	29
4.3 Installation Procedures.....	33
4.3.1 Install Cabinet Mounting Feet.....	33
4.3.2 Install the Insect Screen.....	35
4.3.3 Install the Inverter.....	35
4.3.4 Install the Cable Cover.....	39
5 Electrical Connection.....	42
5.1 Safety Precautions.....	42
5.2 Open the Cabinet Door.....	42
5.3 Cable Connection.....	43
5.3.1 Preparation.....	43
5.3.2 Grounding.....	44
5.3.3 Power Cable.....	46

5.3.4 Communication Cable.....	47
5.3.5 Auxiliary Power Connection.....	47
5.4 Multi-System Connection.....	50
5.4.1 Communication between cabinets.....	50
5.4.2 Power transfer between cabinets.....	51
5.5 Post Connection Procedures.....	54
5.5.1 Complete Cable Cover Installation.....	54
5.5.2 Apply Fire-Proof Mud.....	54
6 Operation.....	55
6.1 Check Before Power-On.....	55
6.2 Power-On.....	56
6.3 Power-Off.....	58
6.3.1 Normal Power-Off Procedure.....	58
6.3.2 Emergency Power-Off Procedure.....	58
7 Product Monitoring.....	59
7.1 DEYE Cloud Website.....	59
7.2 DEYE Cloud APP.....	59
8 Maintenance.....	60
8.1 Safety Precautions.....	60
8.2 Maintenance Schedule.....	61
8.3 Post-Maintenance Requirements.....	63
8.4 Storage.....	63
9 Technical Specifications.....	65
Appendix I Troubleshooting.....	66
Appendix II Emergency Handling.....	69
Appendix III Electrochemical Performance and Durability Parameters.....	71

# 1 Safety

## 1.1 Symbols

Symbols	Description
	Warning; Electricity
	General Warning
	Warning; Hot surface
	5 min remaining before operation
	Separate collection for waste electrical and electronic equipment is required
	Refer to instruction manual
	Operator's manual
	CE mark of conformity
	Class 9 Miscellaneous Dangerous Goods Label for Lithium ion Batteries
	This way up
	Fragile
	Keep away from rain
	Do not roll
	Do not stack

	Center of gravity
	Insert the forklift forks at the position indicated
	No stepping on surface
	Connect an earth terminal to the ground

## 1.2 Safety Precautions

### Personal safety



#### **DANGER**

- Operators must carefully read and comply with all safety information in this manual and relevant documents. Improper operation may cause casualties.
- Keep the product out of reach of children and animals.
- No one except DEYE staff or authorized personnel is allowed to open, repair or disassemble the battery.
- Only qualified professionals or trained personnel are permitted to install and operate the equipment.
- Only qualified professionals are permitted to remove safety facilities and inspect the equipment.
- It is prohibited to handle open flames and ignition sources near the energy storage system or battery.



#### **WARNING**

- Personnel performing wiring operations on the equipment shall possess knowledge of electronics, electrical wiring and mechanical expertise, and be familiar with the electrical and mechanical schematics of this equipment.
- In case of electrolyte contact with eyes or skin, flush thoroughly with clean water for at least 10 minutes and seek immediate medical attention.
- Only qualified personnel are permitted to service the battery. Unauthorized operations void all liability.



#### **CAUTION**

- Personnel operating this equipment shall understand and comply with the requirements of this manual and other applicable documents.

- Components may become extremely hot in case of malfunction; touching is prohibited to prevent scalding.
- Personnel planning to install and operate the equipment must master all necessary safety precautions and local relevant standards.
- This manual does not cover all conceivable scenarios; applicable standards and relevant occupational health and safety regulations shall take precedence during operation.

#### **NOTE**

- **Qualified professionals:** Personnel who are familiar with the working principles and structure of the equipment, have received training or have experience in equipment operation, and are clear about the sources and degrees of various potential hazards in equipment installation.
- **Trained personnel:** Personnel who have received technical and safety training, have the required experience, are aware of potential hazards to themselves during certain operations, and can take protective measures to minimize hazards to themselves and others.

### **Electrical Safety**



#### **DANGER**

- Lethal voltages exist inside the product. Touching the power grid and contact points/terminals of equipment may cause electric shock.
- Direct connection to AC power or PV solar wiring is strictly prohibited.
- Connecting batteries of different models is strictly prohibited.



#### **WARNING**

- Prior to installation, disconnect grid power and ensure the equipment is fully powered off.
- The battery may still be charged after power disconnection. Wait for 10 minutes and use a standard voltmeter to confirm no voltage before operation.
- The battery system must be well grounded with a grounding resistance of less than 1Ω.
- Use insulated tools and gloves during operation, and remove metal accessories such as watches and rings.
- Prevent terminals from contacting exposed wires or metal objects.
- Do not place any tools or metal parts on the battery module or high-voltage control box.
- Adjacent live parts shall be covered or shielded.



### **CAUTION**

- Ensure correct wiring. Distinguish positive and negative poles strictly to prevent short circuits with external devices.
- Do not use faulty or incompatible power conversion unit.
- Verify that battery system parameters are fully compatible with connected equipment.

## **Mechanical Safety**



### **DANGER**

- Installation or operation of the battery system in explosive or high-humidity areas is strictly prohibited.



### **WARNING**

- Do not insert foreign objects into any part of the battery.
- Place necessary warning signs or barriers near the product to prevent accidents caused by misuse or unrelated persons.



### **CAUTION**

- Do not expose cables outside the designated routing.

### **NOTE**

- Unpack and inspect immediately. Contact your vendor if damaged or parts are missing.
- Maintain a State of Charge (SOC) above 5% during use. Recharge within 48 hours after full discharge to avoid over-discharging.
- Contact the supplier within 24 hours if any abnormality occurs to the battery.

## **Maintenance Safety**



### **DANGER**

- Disassembling, modifying, or opening the battery is strictly prohibited.



### **WARNING**

- Power off the battery completely before moving or performing any maintenance.
- All battery terminals and circuit connectors must be disconnected during maintenance.
- Maintenance shall follow the principles: power off, prevent restart, verify no voltage, grounding and short-circuit protection, shield adjacent live parts.

- Residual safety risks may arise from failure to observe warnings, improper installation, or construction by untrained personnel.

#### **NOTE**

- Do not paint any internal or external components of the battery.
- Do not clean batteries with cleaning solvents.
- Commissioning of the battery energy storage system shall be completed no later than six months after delivery.

### **Environmental Safety**



#### **DANGER**

- Do not expose the battery to fire, heaters, high-temperature sources, or open flames.
- In case of fire, use only dry chemical fire extinguishers. Liquid extinguishers are forbidden.
- Damaged or failed batteries may leak electrolyte, producing hydrofluoric acid and other substances, causing chemical burns.
- If a battery is damaged or leaking, avoid direct contact with the substance. Seek technical support or contact a qualified recycling facility immediately for proper handling.
- Do not dispose of used batteries as household waste. Improper handling may cause explosion, fire or severe chemical injury.



#### **WARNING**

- Do not expose the battery to flammable substances, harsh chemicals, or their vapors.
- Do not submerge the battery in water or expose it to moisture (The product's protection rating is valid exclusively when the product is in its complete, fully assembled configuration).

#### **NOTE**

- You are obliged to handle waste batteries in compliance with applicable regulations, including removing any personal data from associated devices, and to return them to a designated or authorized recovery point.
- Batteries contain important raw materials such as iron and lithium, which can be recovered and recycled. Disposal in an environmentally friendly manner helps conserve resources.

## 2 Product Introduction

### 2.1 Product Overview

The Rechargeable Li-ion Battery Storage System mainly consists of lithium battery packs, a power distribution unit (PDU), a thermal management system, and a fire suppression system.

It plays a significant role in reducing electricity costs, ensuring power reliability, integrating renewable energy, and optimizing energy management.

#### Model Variants:


Model	Battery Packs	Nominal Energy (kWh)
GE-F112-BC-2-A3	7	112.53
GE-F128-BC-2-A3	8	128.61

For more technical differences, refer to [Chapter 9 Technical Specifications](#).

### 2.2 Application Scenarios

The following illustration shows basic application of this battery system. A complete operational system may requires these core components:


- Generator or Utility;
- PV modules;
- Hybrid inverters.

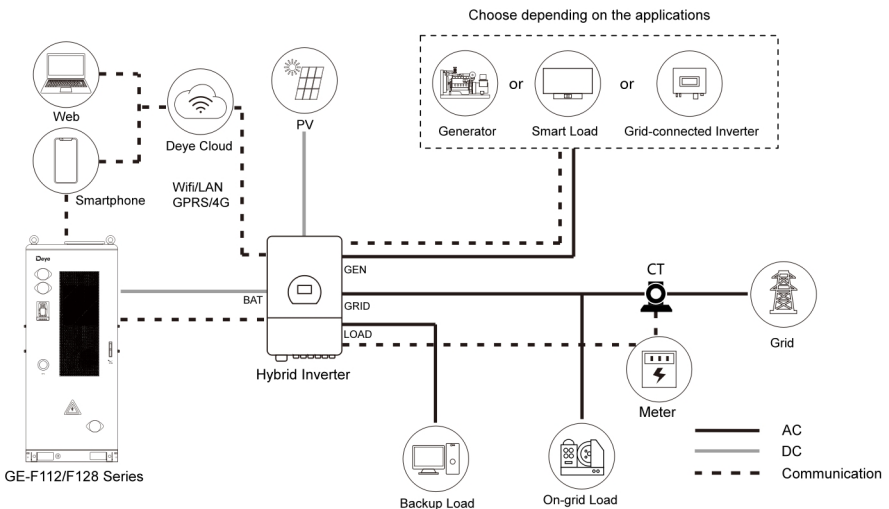

The system supports remote monitoring and control via Deye Cloud, accessible through mobile devices, web portals, or communication terminals on the inverter. Consult with your system integrator for other possible system architectures depending on your requirements.

### 2.3 Product Appearance

**Front View**

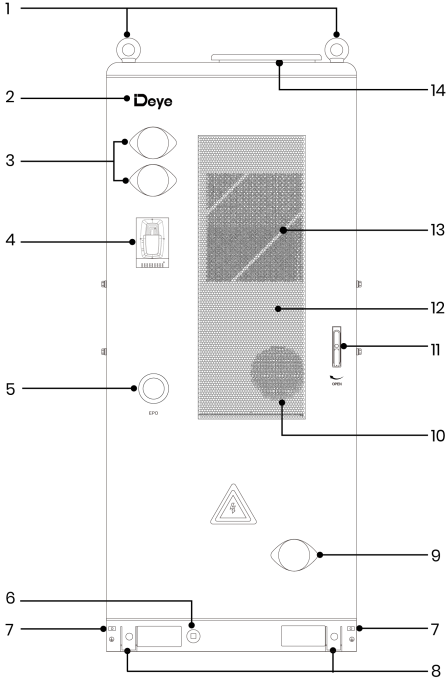


No.	Item	No.	Item
1	Eye Bolt	8	Cabinet Mounting Holes
2	Status Indicator*	9	Intake Valve
3	Exhaust Valve	10	Air Conditioner Air Inlet
4	Audible & Visual Alarm	11	Door Lock
5	EPO (Emergency Power Off) Button	12	Air Conditioner
6	Water Inlet	13	Air Conditioner Air Outlet
7	Protective Earth Terminal	14	Explosion Venting Panel

**\*Status Indicator**

The status indicator displays the equipment operating status by illuminating the Deye logo with different colors.


Color	Description
<b>Blue</b>	The system is in standby or discharge mode.
<b>Green</b>	The system is in charge mode.
<b>Yellow</b>	An alarm has been triggered.
<b>Red</b>	A fault has been detected and the system enters the protection mode.

**Side View**

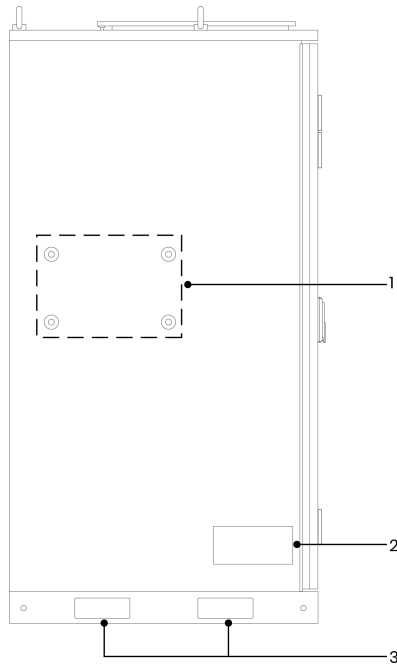


No.	Item	No.	Item
1	Inverter Assembly Holes	3	Forklift Fork Insertion Position
2	Cable Inlet	/	/

## Bottom View

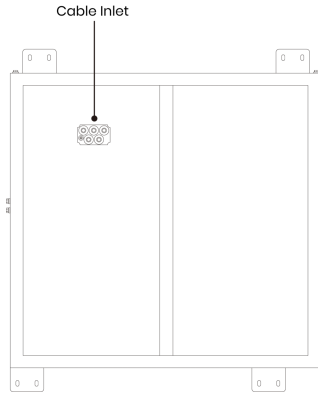

## 2.4 Internal Structure


### Internal Front View

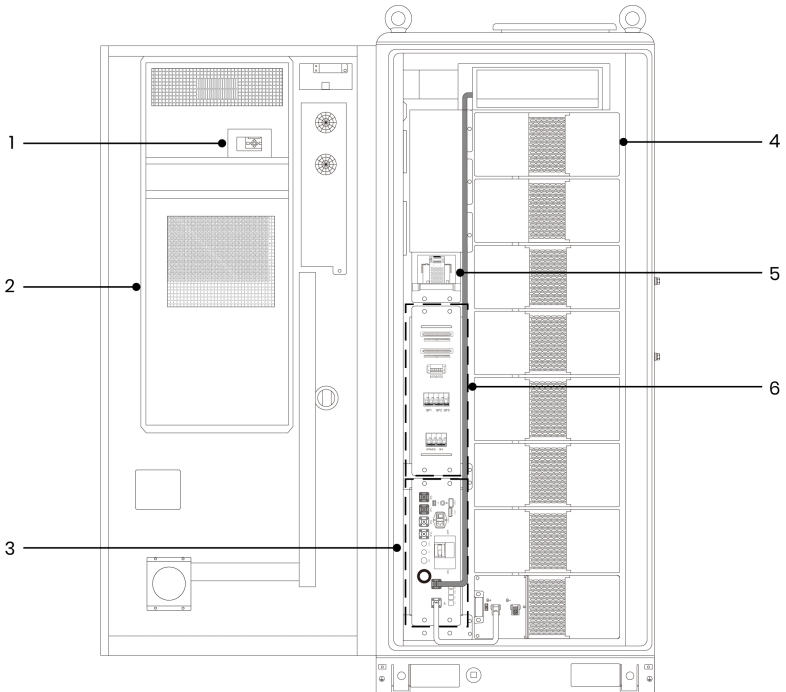

No.	Item	No.	Item
1	Air Conditioner Control Panel	4	Battery Pack*
2	Air Conditioner	5	UPS (Uninterruptible Power Supply)
3	PDU (Power Distribution Unit)	6	Power Distribution Area

\*GE-F128-BC-2-A3: 8 battery packs;  
 GE-F112-BC-2-A3: 7 battery packs.


**Internal Left Side View**

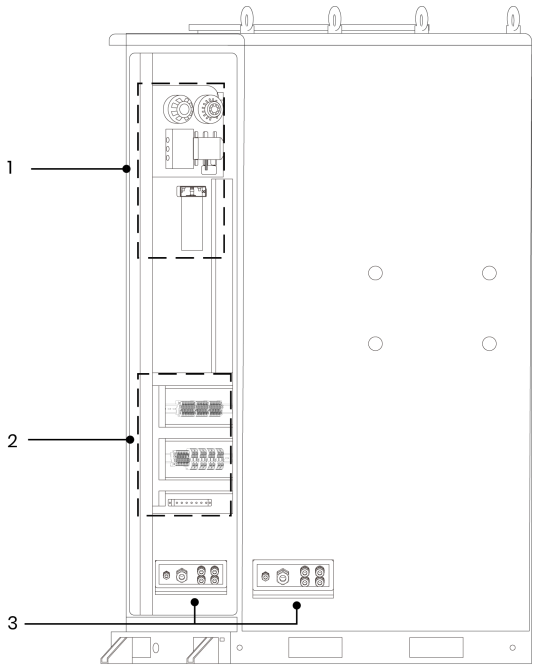

No.	Item	No.	Item
1	Fire Protection System	3	Cable Inlet
2	Terminal & Interface Control Area	/	/


## 2.4.1 Battery Pack

- **Charging Mode:** AC power from the grid or other power sources is converted to DC power by the inverter, which is then stored in the battery system.
- **Discharging Mode:** DC power discharged from the batteries is converted to AC power by the inverter, which is then supplied to connected loads.

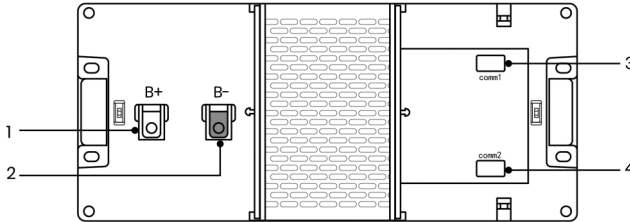

No.	Item	Description
1	B+	Battery module positive terminal (Orange)
2	B-	Battery module positive terminal (Black)
3	COMM1	Battery module communication and power input interface.
4	COMM2	Battery module communication and power output interface.

## 2.4.2 PDU

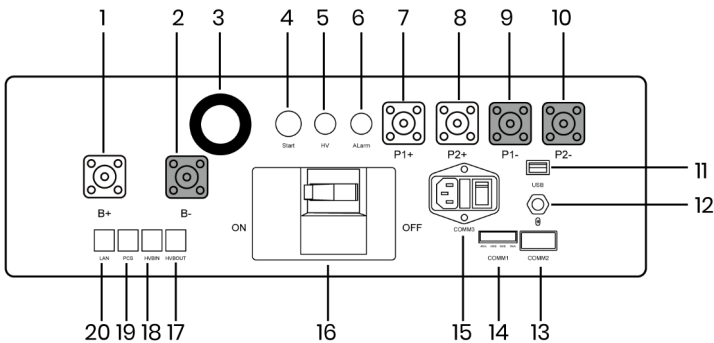

No.	Item	Description
1	B+	Battery module positive terminal (Orange)
2	B-	Battery module positive terminal (Black)
3	Display Screen*	Displays system SOC values and fault codes.
4	Start Button	12 VDC internal power start switch for the PDU.
5	HV Light Indicator	High-voltage danger warning indicator (Yellow).
6	Alarm Light	Battery system fault alarm indicator (Red).


	Indicator	
7	P1+	Terminal for the first PCS positive connection (Orange).
8	P2+	Terminal for the second PCS positive connection (Orange).
9	P1-	Terminal for the first PCS negative connection (Black).
10	P2-	Terminal for the second PCS negative connection (Black).
11	USB	BMS upgrade port and storage expansion port.
12	Bluetooth	Wireless connection port for mobile app.
13	COMM2	Daisy-chain communication port for the first battery module; provides 12 VDC power supply to the first battery module.
14	COMM1	RS485 communication interface & emergency power-off trigger interface.
15	COMM3	This port must be connected to an external power supply: 200~240 VAC, 50/60 Hz, 3 A; otherwise the cooling fan cannot operate normally.
16	DC Circuit Breaker	Manual disconnect switch for connecting / isolating the battery cabinet from external devices.
17	OUT COM	Communication output port for connection with the next BOS-B-PDU-2-A communication input.
18	IN COM	Communication input port for connection with the previous BOS-B-PDU-2-A communication output.
19	PCS COM	PCS battery communication terminal; used to transmit battery data to the inverter.
20	Ethernet (Optional)	Standard RJ45 Ethernet port. Customizable for different needs.

**\*Display Screen**



For the detailed fault codes, refer to [Appendix I Troubleshooting](#).

### 2.4.3 Fire Protection System

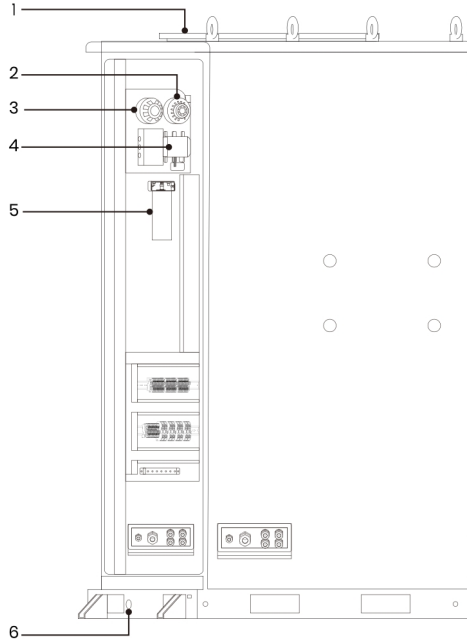

No.	Item	Description
1	Explosion Venting Panel	The explosion venting panel is located at the top of the cabinet. In case of an explosion, the panel respond to the shock waves generated by pressure differentials, opening efficiently to reduce the impact on internal components.
2	Heat Detector	Monitors ambient temperature via a dual thermistor network, with a red indicator light (flashing under normal conditions, steady on during alarm).
3	Smoke Detector	Detects smoke effectively responding to slow-burning, smoldering fires, with a red LED alarm indicator and optional test switch.
4	CO Detector	Measures concentrations of carbon monoxide and combustible gases. It supports RS485 and alarm point output.
5	Aerosol	This aerosol fire suppression unit is triggered by electric signal or open flame. It activates the internal aerosol generator to produce fire-extinguishing coolant via

		chemical reaction.
6	Water Inlet	This pre-reserved DN32 port is used to connect water pipes for the water-based fire protection system.

### Water-based Fire Protection System

**⚠ DANGER**

- In case of severe fire, evacuate immediately and call the fire department.


**⚠ CAUTION**

- For safety, the manual master valve on the fire-fighting water pipe should extend at least 3 meters horizontally from the foundation.
- The final layout of fire protection equipment is subject to review and approval by the local Authority Having Jurisdiction (AHJ).

This water-based fire protection system serves as the final protective barrier for the energy storage system (ESS). It can be activated manually only when all prior fire protection measures have been executed or failed.


For multiple ESS cabinets, it is recommended to install extension pipes (length customized per customer requirements) through the water inlet (**DN40**) on the cabinet and tee-junction connectors to connect each cabinet in series, finally connecting to the external water source (water supply direction shall comply with customer's on-site demand).

It is recommended that the inlet pressure of the water connection port be not less than 0.16 MPa and the inlet flow rate be not less than 10 L/s.

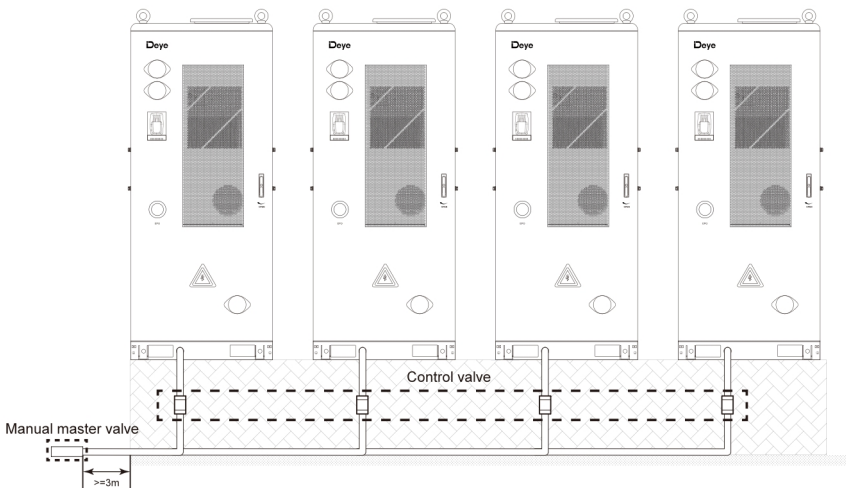

### 2.4.4 Air Conditioner

The air conditioner generates cooled air, which is distributed through built-in air ducts inside the cabinet to the battery modules and power components. During operation, a closed air circulation loop is formed: cool air flows into the battery packs to absorb heat, and warm air returns to the air conditioner for re-cooling.

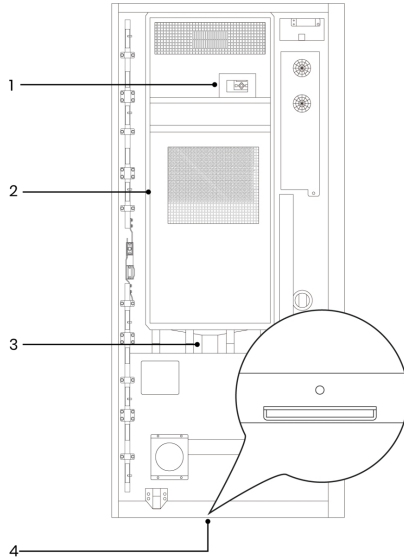

No.	Item	No.	Item
1	Air Conditioner Control Panel	3	Condensate Drain Pipe
2	Air Conditioner	4	Condensate Drain Outlet

## 3 Transportation

### 3.1 Transportation Precautions



#### **DANGER**

- Transportation of end-of-life, damaged or recalled batteries may be prohibited in some regions. Confirm local regulations before transportation; illegal transportation is strictly prohibited.
- It is strictly prohibited to mix dangerous goods with food, medicine, animal feed and their additives in the same vehicle or container, and to transport with sharp objects in the same vehicle or container.



#### **WARNING**

- Lithium-ion batteries are classified as UN3480, Class 9 Miscellaneous Dangerous Goods. For sea, land and air transportation, they fall under PI965 Section I. Class 9 dangerous goods labels and UN identification labels must be affixed during transportation.
- Transportation and storage service providers must hold the dangerous goods operation certification required by local laws and standards; no relevant business shall be undertaken without corresponding qualifications.
- Sea transportation shall comply with the requirements of the International Maritime Dangerous Goods Code (IMDG Code), and land transportation shall meet ADR or JT/T 617 transport standards; illegal selection of transport modes is strictly prohibited.
- If the battery has peculiar smell, leakage, smoke, fire or any other abnormalities before transportation, transportation is strictly prohibited.
- Obtain MSDS certification before sea transportation, seal the external gaps of containers and affix marks certified by the classification society; equip the outer packaging with rainproof canvas covers to avoid paint film scratches.
- Remove obstacles along the transport route, confirm that transport vehicles/containers meet dangerous goods transport standards, and ensure dangerous goods transport vehicles are equipped with two tested CO<sub>2</sub> fire extinguishers.
- Before removing the transport protector, check whether the packaging is damaged and whether the impact indicator on the outer packaging of the battery converter is triggered; if triggered, the risk of transport damage cannot be ruled

out.

- When transporting faulty batteries, avoid flammable and explosive material storage areas, residential areas, mass transit facilities, elevators and other densely populated places.
- Only the top lifting lugs of the battery cabinet are allowed for lifting, and the included angle of slings shall be at least 60°; illegal lifting is strictly prohibited.
- Battery cabinets must be fixed vertically; transport vehicles with twist locks are recommended. If twist locks are unavailable, the product shall be fixed at both the top and bottom with lashing straps to prevent displacement and rollover during transportation.
- No speeding for land transportation: speed limit of 70km/h on highways, 40km/h on town roads, 50km/h when turning; sudden start and emergency braking are strictly prohibited.
- Keep containers upright during the whole sea transportation, ensure the packing cases are firm and reliable during loading and unloading, take moisture-proof measures, and operate smoothly throughout the process.



#### **CAUTION**

- During the whole transportation process, strictly prevent severe vibration, impact and extrusion, avoid direct sunlight, rain and moisture, and take rainproof, moisture-proof and sun-protection measures.
- Prefer sea or land transportation with good road conditions; if transportation on a slope is required, additional traction devices shall be added. The inclination angle of equipment shall not exceed 15° during the whole transportation.
- Smoking is strictly prohibited in transportation, loading and unloading areas. Freight personnel are not allowed to open the outer packaging of battery packs without permission; handle with care during moving to prevent bumping.
- Transport operators must wear protective gloves and toe-cap safety shoes for personal protection, and pay special attention to avoiding scratches by sharp metal panels and crushing injuries by heavy objects.

#### **NOTE**

- All operations must be completed by professionally trained personnel, and unauthorized operation by non-professionals is strictly prohibited.
- Complete compliant and accurate declaration before transportation, and carefully check whether the battery packaging, labels and markings are intact.
- Transport vehicles/containers must meet dangerous goods transport standards to ensure the product is firmly fixed throughout the transportation process.

- Do not remove the product transport packaging before arrival at the installation site; remove it after arrival.

## 3.2 Transportation Methods



### 3.2.1 Forklift




#### DANGER

- During forklift operation, unrelated personnel must keep at least a 2m safe distance; standing or riding on the forklift or cargo is strictly prohibited.
- Overloading and lifting loads too high are strictly prohibited to avoid forklift instability and rollover risks.
- Only certified professional forklift operators may perform operations; unauthorized operation by non-professionals is forbidden. Strictly follow all clauses; violators bear full responsibility for equipment damage and personal accidents.

#### Fork Positioning & Loading:

Insert forks strictly into the designated "Forklift Fork Insertion" mark (  ↓ ) on the packaging, following the supporting diagram for details. When lifting heavy or unbalanced loads, align with the equipment's center of gravity mark (  ) to ensure balanced stress.

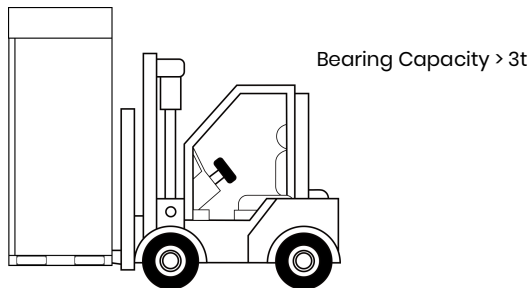

#### Driving & Steering:

- Driving speed shall be strictly controlled below 3 miles per hour (3mph). Sharp turns are strictly prohibited to avoid cargo shaking and imbalance.
- Before reversing, the forklift operator must carefully check the rear area and confirm safety before reversing. When reversing in confined spaces, a special commander must be arranged to guide the operator throughout the process.
- Operating forklifts on slopes with a gradient  $\geq 5^\circ$  is strictly prohibited. Slow down and


operate carefully when lifting loads on uneven roads.

- Tilting or inverting the cabinet is strictly prohibited during the whole transfer process. If tilting or inversion is necessary under special circumstances, restore the cabinet to upright position as soon as possible, and leave it standing for 2 hours before power-on.

### 3.2.2 Hoisting

#### **DANGER**

- Do not stand within 0.5-1m of the lifting area. No one is allowed to stand under the boom and operation station during the whole hoisting process.

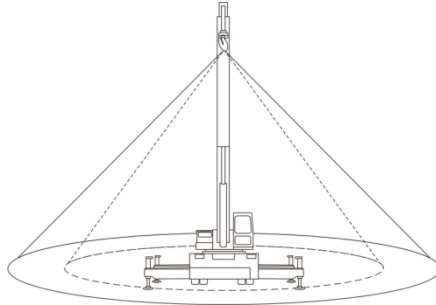


- It is forbidden to conduct hoisting operations in bad weather such as typhoon, heavy rain, thick fog and thunderstorm.
- Ensure correct and firm connection between equipment and lifting tools before hoisting. Non-standard connection may cause product damage, serious injury or even death.
- Do not lift or move the energy storage system equipment after batteries are installed.
- Only use approved and certified lifting equipment to move the product, and non-standard lifting tools are strictly prohibited.
- Only qualified personnel can hoist the equipment.

#### **WARNING**

- Before hoisting, check the crane, hoisting ropes and other equipment to confirm their load parameters meet the bearing requirements of the product.
- Ensure all doors of the equipment are closed and locked before hoisting to keep the cabinet airtight and loose-free.
- Ensure the crane is placed at a suitable position, and long-distance hoisting is strictly prohibited.

- Ensure all sling connections are safe and reliable, and the lengths of slings connected to cabinet corner fittings are equal.

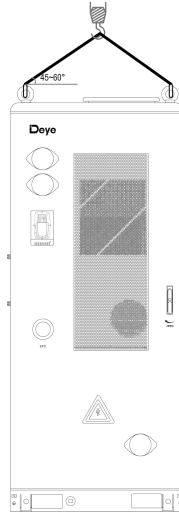

Bearing Capacity > 5t

- A professional commander is required throughout the entire hoisting process to uniformly schedule the operation.
- Keep the equipment stable and non-skewed during hoisting. It is forbidden to shake the crane to avoid sudden drop or impact on the equipment.

 **CAUTION**

- The length of slings can be adjusted appropriately according to actual requirements of the installation site to ensure hoisting balance.
- Handle hoisting gently, lower the cabinet slowly and smoothly to the position, and eliminate impact and collision.
- Adopt vertical hoisting, and do not drag the cabinet on any surface during hoisting. Do not drag the cabinet when assembling or disassembling lifting tools to prevent scratches on the cabinet surface.
- It is recommended to hoist the equipment smoothly along the left-right horizontal direction to ensure stable operation.

# 4 Installation



## DANGER

- Do not expose the equipment to flammable or explosive gases, smoke, or any explosive environments, and do not operate the equipment in such environments. Otherwise, it may cause serious safety accidents such as fire, explosion, or equipment damage.
- There is a risk of static overload during the entire installation process, which may cause damage to building structures. Be sure to verify the site bearing capacity and anti-static measures in advance.



## CAUTION

- Only qualified or trained personnel, who have mastered all necessary safety precautions and relevant applicable regulations, are permitted to install the equipment.
- Keep the equipment out of the reach of children and away from daily working or living areas.



## WARNING

- The installation and usage environment must comply with relevant international and local laws and regulations. The user is obligated to protect the ESS against fire and other hazards.
- Product assembly must be carried out in strict accordance with the design scheme, process requirements, relevant regulations and national standards; unauthorized changes to assembly procedures and technical parameters are strictly prohibited.

## 4.1 Pre-Installation Preparation

### 4.1.1 Site Requirements



## DANGER

- Do not install the equipment in low-lying areas where it may become submerged. The installation level must be at least 300 mm above the highest historical water level in the area. Do not install in any position that could be submerged in water.



## **WARNING**

- Install the equipment in an outdoor area far from liquids. Do not install it under areas prone to condensation (e.g., under water pipes, air exhaust vents) or water leakage (e.g., air conditioner vents, ventilation vents, equipment room feeder windows). Liquid ingress may cause equipment faults, short circuits, fires, or electric shock.
- To prevent high-temperature damage or fire, ensure that the equipment's ventilation vents and heat dissipation systems are not obstructed or covered by other objects during operation. Poor heat dissipation can lead to equipment overheating, fire, or explosion.
- To protect the equipment from wildfires caused by high summer temperatures, ensure there are no vegetation or flammable plants within 3 meters of the equipment. Wildfires can spread to the equipment, causing explosions or fires.
- For safety purposes, the distance between the equipment and residential buildings must be more than 12m, and the distance between the equipment and densely populated buildings (such as schools, hospitals) must be more than 30.5m. If this safety distance cannot be met, a firewall must be built between the equipment and the building to prevent fire or explosion hazards from affecting people.
- Outdoor storage systems must be at least 10 feet away from boundaries, public roads, buildings, flammable materials, hazardous materials, high piles, and other non-grid-related hazards to reduce the risk of fire, explosion, or collision-induced accidents.
- The distance between the energy storage system's exhaust device and the air intakes of heating, ventilation, and air conditioning systems, windows, doors, discharge platforms, and fire sources of other buildings or facilities must be more than 4.6m to prevent the spread of harmful gases or fire.
- Do not install the equipment in places without proper fire-fighting facilities or where firefighters cannot easily access. In the event of a fire, lack of fire protection or accessibility will lead to the rapid spread of fire, resulting in serious injury or death.
- Do not install the equipment in an easily accessible location. The enclosure and heat sink of the ESS reach high temperatures during operation, which may cause severe burns.
- Do not install the ESS on moving objects (such as ships, trains, or cars). Vibration and instability during movement may damage the equipment, leading to leaks, fires, or explosions.

- Do not install the equipment in environments with magnetic dust, volatile or corrosive gases, infrared or other radiation, organic solvents, conductive metals, or salty air. These environments can corrode or damage the equipment, leading to short circuits, fires, or explosions.
- Do not install the equipment near areas that may produce interfering or harmful gases (such as garbage dumps or chimney outlets). These gases may corrode the equipment or create an explosive atmosphere.
- Do not install the equipment in areas with strong vibration, noise, or electromagnetic interference. These factors can damage the equipment's internal components, leading to malfunctions, fires, or explosions.
- During the installation, commissioning, and operation of the energy storage system, ensure that each unit is equipped with no less than 2 fire extinguishers nearby. Insufficient fire-fighting equipment may result in uncontrollable fires, leading to death or serious injury.

 **CAUTION**

- Do not install the equipment in areas conducive to the growth of microorganisms (such as fungi or mildew). Microbial growth may damage the equipment's surface or internal components, leading to malfunctions and potential minor injuries during maintenance.
- Do not install energy storage systems in salt-damaged or polluted areas. Corrosion caused by these environments may damage the equipment, leading to malfunctions and minor injuries during handling or maintenance.

The battery storage system must be installed in locations that meet the following criteria:


Condition	Required Distance	Examples
Distance from coast	More than 2000 m	/
Distance from pollution sources	Heavy pollution sources: $\geq 1500$ m	Smelters, coal mines, thermal power plants
	Moderate pollution sources: $\geq 1000$ m	Chemical, rubber, electroplating
	Mild pollution sources: $\geq 500$ m	Food, leather, heating boilers, slaughter houses, centralized garbage dumps, sewage treatment stations

## NOTE

- The safe distance between the equipment and production buildings shall comply with local fire codes or standards.
- Install the equipment in a clean, dry, and well-ventilated area with appropriate temperature, humidity, and altitude. For detailed parameters, refer to Chapter 9 Technical Specifications.
- Reserve sufficient space for expansion according to the whole-life cycle needs of the energy storage system.

## Recommended Clearance

During product installation, the following clearance requirements shall be met between the product and surrounding buildings and objects:

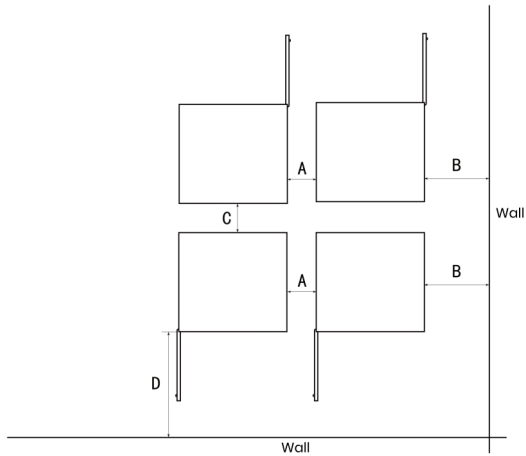

**Top View**

Item	Distance (mm)
A	100
B	100
C	100
D	1500

## 4.1.2 Foundation Requirements

An inadequately designed foundation can cause installation difficulties, compromise cabinet door operation, and undermine overall system performance. Therefore, the foundation for the Energy Storage System (ESS) must be carefully designed and constructed in strict compliance with applicable industry and local standards to ensure proper mechanical support, cable routing, and future maintenance access.

At a minimum, the following requirements shall be met.

<b>General Requirements</b>	
<b>Requirement</b>	<b>Description</b>
Surface material	Install cabinets on concrete or other non-combustible surfaces.
Surface condition	The surface must be level, stable, flat, and free of depressions or tilts, with sufficient load-bearing capacity.
Load capacity	The foundation must support the total weight of the equipment. If the bearing capacity is insufficient, re-verification is required.
Extension beyond cabinet	100 mm on each side
<b>Foundation Construction Requirements</b>	
<b>Requirement</b>	<b>Description</b>
Concrete grade & thickness	Default C30 with a thickness of 200mm, unless otherwise specified
Bedding layer	100 mm thick C15 concrete below the slab
Reinforcing steel bars	HRB400 (Grade III), 12 mm diameter, spaced 150 mm apart
Corrosion protection	Apply standard anti-corrosion measures to steel bars after rust removal.
Bearing stratum	Undisturbed soil with characteristic bearing capacity $\geq 100$ kPa.
<b>Construction &amp; Excavation Requirements</b>	
<b>Requirement</b>	<b>Description</b>
Foundation pit compaction	The bottom of the pit must be compacted and leveled before construction.
Construction dewatering	Implement dewatering to prevent waterlogging in the pit.
Excavation safety	Ensure proper safety measures for excavation support.
Water prevention after excavation	The pit must not be soaked. If water intrusion occurs, further excavation and replacement filling are required.


Surface leveling tolerance	Levelness error between foundation and cabinet contact surface $\leq 3$ mm.
<b>Height &amp; Drainage Requirements</b>	
<b>Requirement</b>	<b>Description</b>
Height above ground	Foundation must be higher than the local historical highest water level, and at least 300 mm above the surrounding ground level.
Drainage system	Drainage facilities should be based on local geology and municipal requirements to prevent water accumulation at the foundation. The system must accommodate the local historical maximum rainfall. Discharged water must comply with local environmental regulations.
<b>Cable Management &amp; Sealing</b>	
<b>Requirement</b>	<b>Description</b>
Cable outlets/trenches	Foundation design shall accommodate ESS cable outlet positions, with pre-reserved trenches or entry holes as required.
Sealing	All reserved foundation holes and equipment bottom inlet ports shall be fully sealed post-installation.

For ESS cabinets with bottom cable entry (no side cable inlets are provided to prevent foreign material ingress), on-site cable trenches must be pre-installed in compliance with the following requirements:

<b>Cable Trench Requirements (for bottom cable entry)</b>	
<b>Requirement</b>	<b>Description</b>
Dust & Rodent Protection	Prevent foreign objects from entering the cabinets.
Waterproof & Moisture Protection	Protect cables from aging and short circuits that could affect normal operation.
Cable bending radius	Account for large cable cross-sections (due to high power rating) and provide adequate bending radius.

 



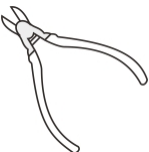

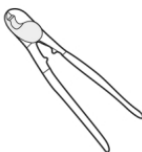

 **CAUTION**


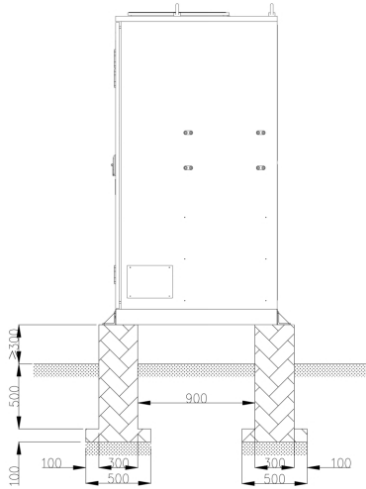





 




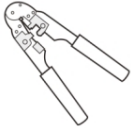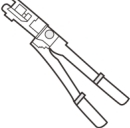

- The following figure is for reference only, not a final foundation construction. All foundation design parameters shall be verified based on the site-specific conditions.










**4.1.3 Tool Requirements**

Recommended installation tools are listed below and the pictures are for reference only.

Tools			
			
Hammer drill	Phillips insulated torque screwdriver	Flat-head insulated torque screwdriver	Insulated torque socket wrench
			
Diagonal pliers	Wire stripper	Cable cutter	Rubber mallet

			
Manual crimping plier	Hydraulic plier	Needle-nose pliers	Marker
			
Utility knife	Steel measuring tape	Level	Multimeter DC voltage measurement
			
Heat shrink tubing	Heat gun	Cable tie	Insulated ladder
			
Powered industrial forklift	Crane		

Personal Protective Equipment			
			
Insulated gloves	Protective gloves	Goggles	Dust mask
			
Insulated shoes	Safety helmet	Protective suit	

## 4.2 Packing List

### WARNING

- If the installation environment is not conducive to equipment protection, take measures to prevent internal battery failure caused by condensation or dust corrosion (e.g., cover with woven cloth or dust cover).
- During component handling and storage, collision and scratch are strictly prohibited. Keep parts dry and rust-free to avoid damage and part failure.

### CAUTION

- If possible, do not remove the transport packaging until the equipment arrives at the installation site.
- After preparing the equipment for installation, unpack it carefully to avoid scratching the equipment.
- Keep the equipment stable during unpacking.

**NOTE**

- After unpacking the equipment, check that the deliverable contents are intact and complete, and free from any damage. If any items listed in the Packing List is missing or damaged, contact your dealer or our after-sales service team.
- All components must be thoroughly cleaned before assembly to remove burrs, flash edges, oxide layers, rust, sand particles, dust and stains, ensuring a clean and impurity-free surface.

The accessory kit for cabinets includes standard parts and inverter-specific parts for connection with different inverter models.




 
 



 
**Accessory Kit:**

 


 



 
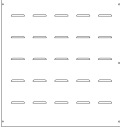
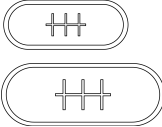
- **GE-F128-AP-A:** Packing List 1 + Packing List 2
- **GE-F128-AP-B:** Packing List 1 + Packing List 3

**NOTE**

- GE-F128-AP-A is compatible with inverter models SUN-60K-SG02HP3-EU-EM6, SUN-40K-SG02HP3-EU-BM4, and SUN-30K-SG02HP3-EU-BM3 while GE-F128-AP-B is compatible with inverter model SUN-50K-SG02HP3-EU-BM4-P.

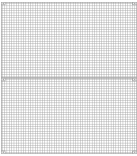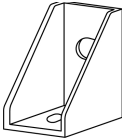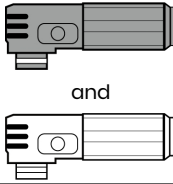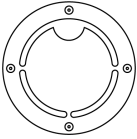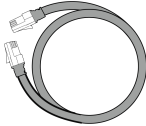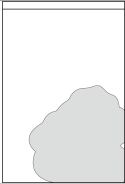**Packing List 1**



		 <p style="text-align: center;">and</p> 	
<p>Insect Screen ×2 pcs</p>	<p>Cabinet Mounting Feet ×4 pcs</p>	<p>Quick-fit Connector ×1 set</p>	<p>Terminal Resistor ×2 pcs</p>
			
<p>Transparent Cover Plate ×1 (Ø113mm, t=2mm)</p>	<p>3000mm 26AWG Communication Cable ×1 pc</p>	<p>Fire-proof Mud ×1 bag (2.5kg)</p>	<p>M16×40 Hex Head Bolt Assembly ×4 pcs (include spring &amp; flat washers)</p>

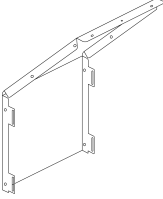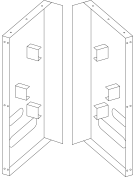			
MI2x80 Expansion Bolt ×4 pcs	M4x10 Hex Head Screw ×22 pcs	Inverter Mounting Bracket ×2 pcs	Nylon Cable Tie ×20 pcs
Cable Cover ×1 set, including:			
			
Angled Side Bracket ×1 pc	Vertical Mount Plate ×1 set	Cable Management Rail ×3 pcs	Angled Side Panel ×1 pc
			
Front Cover ×1 pc	Cable Grommet ×2 sets		

### Packing List 2

#### For Inverter Models:

SUN-60K-SG02HP3-EU-EM6, SUN-40K-SG02HP3-EU-BM4, SUN-30K-SG02HP3-EU-BM3  
(Referred to as 60kW Inverter, 40kW Inverter, and 30kW Inverter respectively)

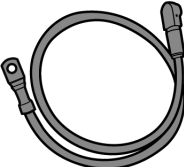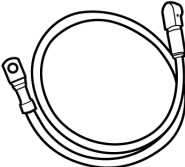	
3000mm 3AWG DC Negative Power Cable ×2 pcs (Black)	3000mm 3AWG DC Positive Power Cable ×2 pcs (Red)


### Packing List 3

#### For Inverter Model:

SUN-50K-SG02HP3-EU-BM4-P (Referred to as 50 kW Inverter)



3000mm 1AWG DC Negative Power Cable  
×1 pc (Black)

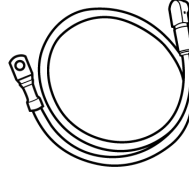

3000mm 1AWG DC Positive Power Cable  
×1 pc (Red)

### Recommended Torque

Applicable for sheet metal parts (Battery pack cabinet assembly / Bracket connection)

Bolt Specification	Recommended Torque	Unit
M3	0.7 ~ 0.9	N·m
M4	1.6 ~ 2.2	N·m
M5	3.2 ~ 4.4	N·m
M6	5.3 ~ 7.4	N·m
M8	12 ~ 19	N·m
M10	25 ~ 38	N·m
M12	44 ~ 65	N·m
M14	54 ~ 108	N·m
M16	110 ~ 165	N·m
M18	150 ~ 240	N·m
M20	216 ~ 335	N·m

#### NOTE

- Strictly adhere to the specified torque values to prevent over-tightening or under-tightening.
- The torque value is for reference only for standard bolts during normal assembly; adjust appropriately for special working conditions (high vibration/harsh environment).
- Use a calibrated torque wrench for installation to ensure torque accuracy.

## 4.3 Installation Procedures

### 4.3.1 Install Cabinet Mounting Feet


#### NOTE

- Due to variations in drilling accuracy and bit material, it is recommended to use a drill bit with a diameter ranging from  $\Phi 20.5$  to  $\Phi 21$ .


To secure the cabinet to the ground, install the four cabinet mounting feet. Two installation methods are available: **front-rear mounting** and **left-right mounting**, which are identical in the installation steps while mounting positions differ.

The following installation steps are described based on the front-rear mounting method:


1. Position the cabinet at the installation site.
2. Align the leveling feet to cabinet holes. Do not tighten the screw.
3. Mark hole positions on the ground.
4. Remove the leveling feet and drill holes (102–105 mm deep) using a hammer drill.

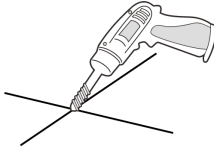


5. Pre-install 4 pieces of M12×80 expansion bolts, torque to 140 N·m.

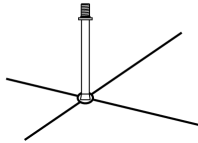

6. Secure feet to cabinet with M16×40 hex bolts.

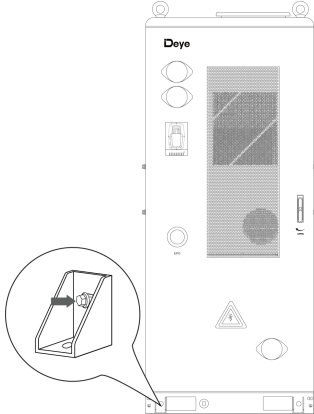

7. Tighten expansion bolt nuts to mount the cabinet to the ground.

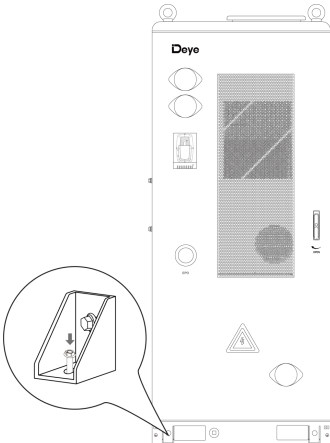


### 4.3.2 Install the Insect Screen

**NOTE**

- It is recommended to install an insect screen in environments prone to airborne debris such as catkins, large insects and other foreign particles, to preserve efficient heat dissipation and ensure stable operation.

1. Clean the air inlet and air outlet areas of the cabinet.
2. Attach the two magnetic insect screens to the reserved positions at the air inlet and air outlet respectively.

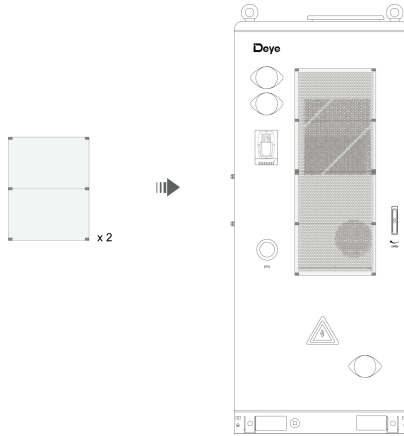

3. Ensure the screens are fully bonded and securely fitted to prevent loosening or falling off during operation.

### 4.3.3 Install the Inverter


The compatible inverter can be mounted on either the left or right side of the cabinet based on site requirements. The following installation procedures take the left-side mounting configuration as an example for illustration.

Prepare the following mounting brackets before installing the inverter.


<p>Wall Mounting Bracket (Included with Inverter)</p>	<p>Inverter Mounting Bracket ×2 pcs (Included with the cabinet)</p>

### For 50 kW Inverter

1. Prior to inverter installation, remove the pre-installed screws on the left side of the cabinet. Keep these screws properly for later installation.
2. Align the **Inverter Mounting Brackets** to the four Inverter Assembly Holes on the cabinet side. Fasten the brackets to the cabinet using the pre-installed screws. Ensure all four large screw holes on the brackets face outward.

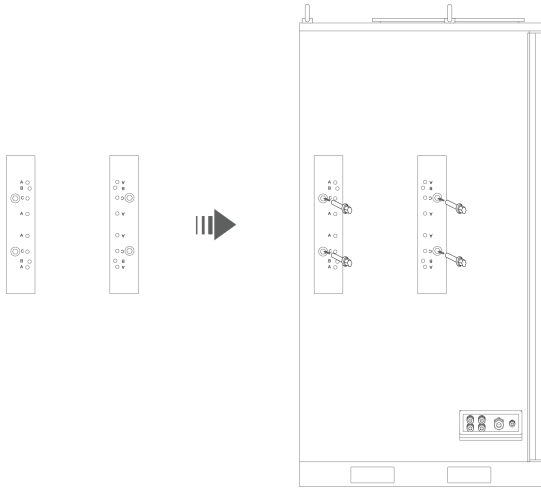

3. Secure the **Wall Mounting Bracket** to the "A" marked screw holes on the brackets installed in Step 1, using 4 screws.

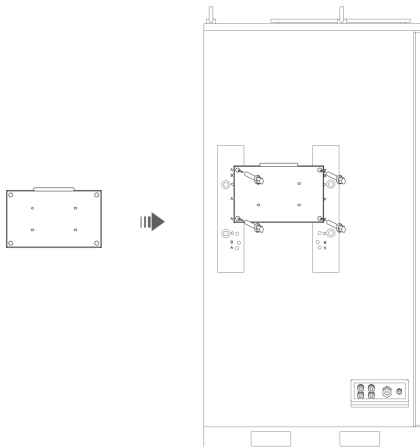


4. After the Wall Mounting Bracket is securely fastened, lift the inverter steadily and place it onto the bracket.




## WARNING

- The inverter is heavy. Multiple qualified personnel must work together to lift and mount it. A forklift or other suitable lifting aids may be used.
- Single-person handling/lifting is strictly prohibited to prevent equipment fall, personal injury, or equipment damage.

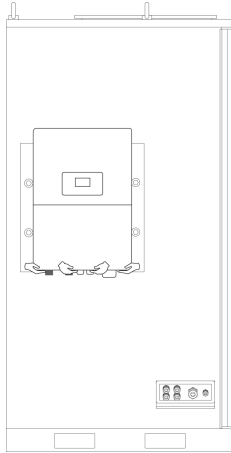


5. Secure the inverter to the brackets using the screws supplied with the inverter: 3 screws per side, 6 screws in total.

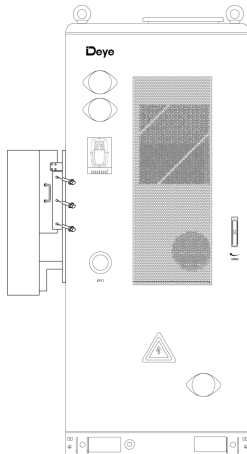

### For 60/40/30 kW Inverter

1. Prior to inverter installation, remove the pre-installed screws on the left side of the cabinet. Keep these screws properly for later installation.
2. Align the Wall Mounting Bracket to the four Inverter Assembly Holes on the cabinet side. Fasten the bracket to the cabinet using 4 screws.

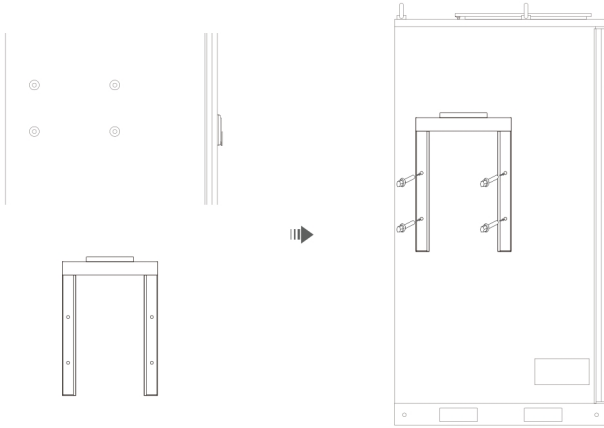


3. After the bracket is securely fastened, lift the inverter steadily and place it onto the designated bracket.




#### **WARNING**

- The inverter is heavy. Multiple qualified personnel must work together to lift and mount it. A forklift or other suitable lifting aids may be used.
- Single-person handling/lifting is strictly prohibited to prevent equipment fall, personal injury, or equipment damage.

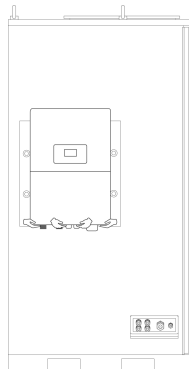

- Secure the inverter to the brackets using the screws supplied with the inverter: 3 screws per side, 6 screws in total.

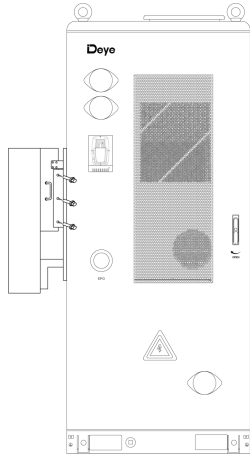

#### 4.3.4 Install the Cable Cover

 **WARNING**


- Do NOT install the Angled Side Panel and Front Cover until all wiring is finished.

**NOTE**


- Cable cover can be installed on cabinets equipped with inverters. It is not required for cabinets used for DC parallel expansion.

**Preparation**

- Remove the 10 pre-installed screws on the cabinet and remove the cable inlet cover. Keep these screws for later installation.

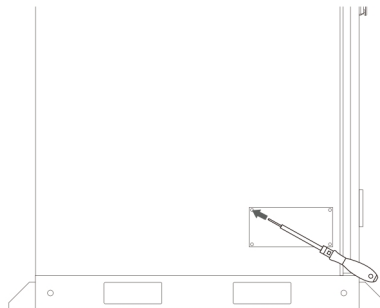


2. Cut slits in the center of the Cable Grommet according to the cable diameter, then press the grommets into the oval mounting holes on the Vertical Mount Plates.

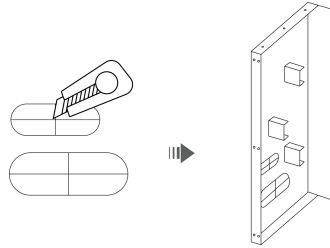


### Installation Steps


1. Secure the **Angled Side Bracket** to the cabinet using the removed pre-installed screws.

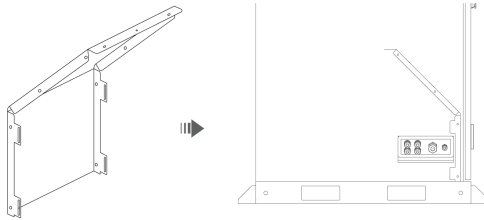


2. Secure 2 **Vertical Mount Plates** to the cabinet using the removed screws. Then, fasten the overlapping section of the two components with 3 M4×10 screws.

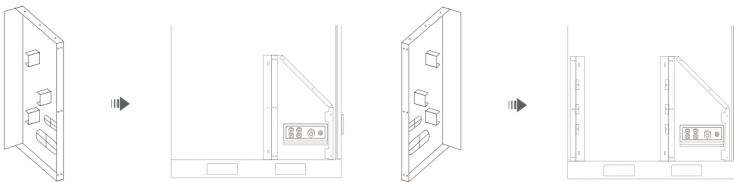

3. Mount the three **Cable Management Rails** on the cabinet to organize and secure cables.

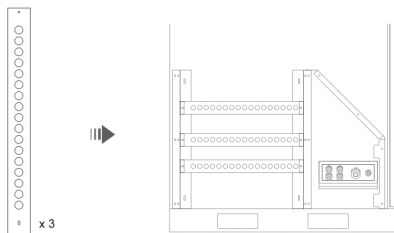

4. Complete all electrical connections and wiring as the steps in [Chapter 5](#). The diagram below is for reference only.
5. Organize cables with supplied cable ties and secure them to the **Cable Management Rails**.
6. Ensure that all cables are securely connected, then install the **Angled Side Panel** and **Front Cover**.

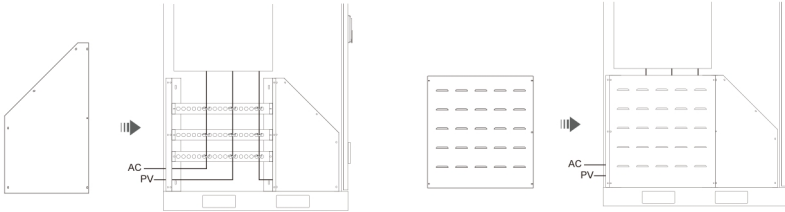

# 5 Electrical Connection

## 5.1 Safety Precautions



### WARNING

 
 
- Only qualified electrical professionals can perform the electrical connection.
- The product can only be used in situations equipped with overvoltage protection devices.
- Do not perform electrical connections during sandstorms or when the relative humidity of the surrounding environment is greater than 95%.
- Do not contact live parts directly without protection.
- Before cable connection, ensure that there is no voltage on the AC side and DC side.
- Only allow connection of “+” to “+” and “-” to “-”.
- Before connecting cables, check that the polarity of all input cables is correct. Do not pull wires and cables forcibly during electrical installation; otherwise, the insulation performance may be affected. Ensure all cables have sufficient bending space and take necessary auxiliary measures to reduce cable stress.

### NOTE

- This system must be used in conjunction with compatible hybrid inverter models. It needs to establish communication with the inverter to activate the lithium battery mode, ensuring optimal battery performance.
- After cable connection, carefully verify that all connections are correct and secure.
- When connecting to inverters or operating in parallel mode, please use the cables provided in the packing list. If other cables must be used under special circumstances, ensure they comply with relevant standards.

## 5.2 Open the Cabinet Door

1. Slide the protective cover upward to expose the keyhole.
2. Insert the door key into the keyhole and turn it clockwise until the handle pops out.
3. Rotate the door handle in the direction indicated to unlock and open the door.



## NOTE

- After completing all connections and wiring, close and securely lock the cabinet door, and keep the key.

## 5.3 Cable Connection



### WARNING

- After completing all electrical connections, perform cable management and cover plate installation (cover plates for cable inlet and cables) as described in section [4.3.4 Install the Cable Cover](#).

## NOTE

- The cable connections and wiring methods described herein assume the inverter is installed on the left side of the cabinet, with cables routed through the side cable inlet.


### 5.3.1 Preparation

Prepare the following cables before electrical connection. For the full cable name and pictures, refer to [4.2 Packing List](#).

Cable Type	Quantity	Cable (mm <sup>2</sup> )	Note
Ground Cable (Cabinet Grounding)	-	20~30	Prepared by the user (M8 OT/DT Terminal)
Auxiliary Power Cable	-	18~22	Prepared by the user (E25-16 terminals for L 1, 2, 3, N; M5 OT terminal for PE)
Communication Cable	1	-	Included
3AWG Positive Power Cable	2	25	Included (for 30 kW, 40 kW and 60 kW Inverters)
3AWG Negative Power Cable	2	25	
1AWG Positive Power Cable	1	35	Included (for 50 kW Inverter)
1AWG Negative Power Cable	1	35	

**NOTE: Power cable specifications (3AWG/1AWG) vary by inverter model.**

Before connecting cables, pierce the rubber seal at the cabinet Cable Inlet using a screwdriver.

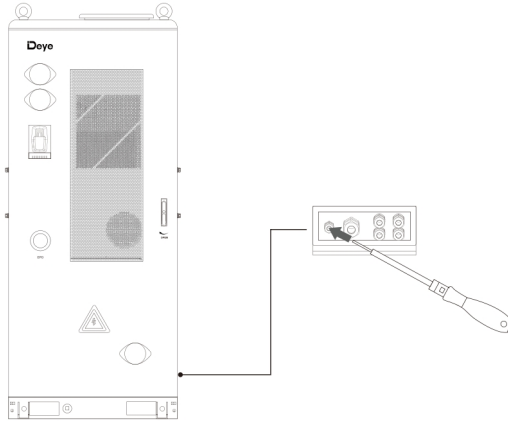

### 5.3.2 Grounding

**WARNING**


- Ensure the ground cable is securely connected to prevent electric shock.
- Either cabinet grounding or auxiliary power grounding is mandatory.

**CAUTION**


- The grounding point at the AC output port is only for protective earthing equipotential bonding and cannot replace the enclosure grounding point.
- After connecting the ground cable, it is recommended to apply silicone grease or paint around the ground terminal.
- After completing the grounding connection, grounding resistance must be measured and must comply with applicable national/local standards and regulations.
- It is recommended to prepare a ground cable with an OT/DT terminal for better and safer grounding.

Steps to connect the ground cable:

1. Remove the screws on the Protective Earth Terminal of the cabinet with a screwdriver. Keep the screws for later connection.

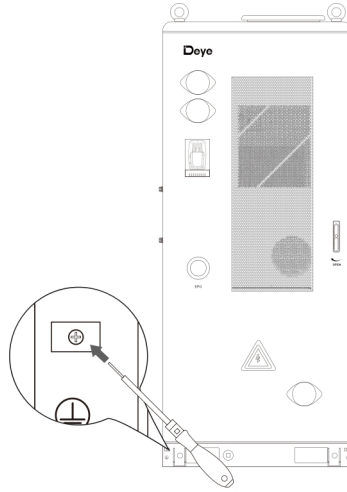


2. Align the OT/DT terminal of the ground cable with the Protective Earth Terminal, then tighten the screw using an insulated torque socket wrench to ensure a secure connection. **Recommended torque: 25 N·m.**

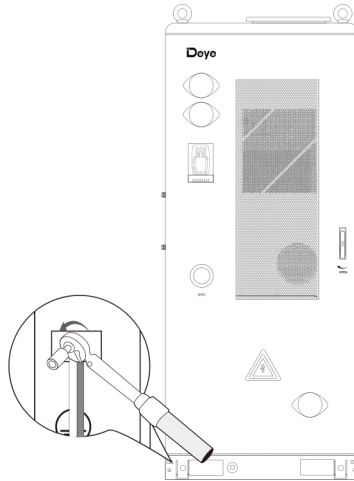


### 5.3.3 Power Cable

1. Connect the OT terminals of the positive or negative power cables to the BAT+ or BAT- ports on the Inverter with screws.
2. Route the cables through the cabinet Cable Inlet.
3. Connect the quick-fit connector of the positive or negative power cables to the **P+** or **P-** ports on the PDU.

#### Diagram for wiring and connecting to the inverter:

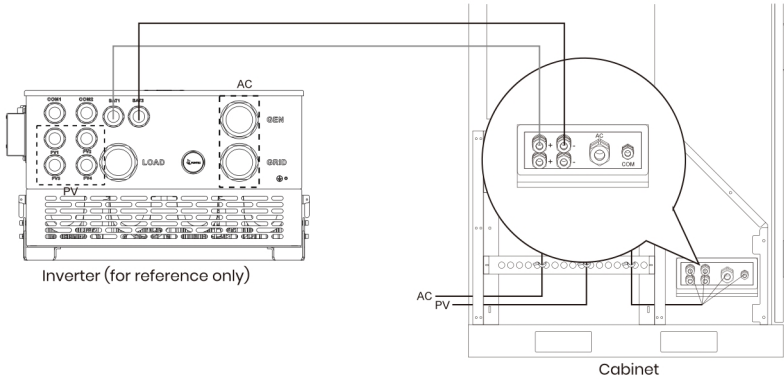


#### Diagram for connecting to the cabinet:

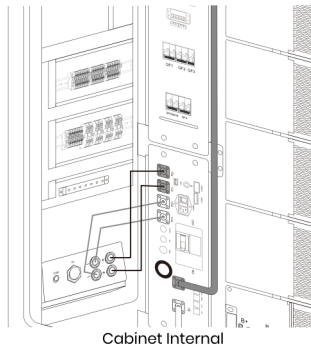

### 5.3.4 Communication Cable

1. Connect one end of the communication cable to the inverter.
2. Route the communication cable through the cabinet Cable Inlet.
3. Connect the other end to the **PCS port** on the cabinet PDU.

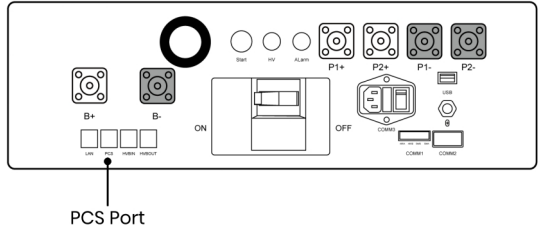


### 5.3.5 Auxiliary Power Connection

Steps to connect the auxiliary power cable:

1. Route the auxiliary power cable through the Cable Inlet of the cabinet.
2. Strip the auxiliary power cable with the wire stripper to an appropriate length according to the terminal being used
3. Insert the stripped L1, L2, L3, and N lines to the prepared **E25-16 terminals** and the stripped PE line to the **M5 OT terminal**.
4. Crimp the terminals with the manual crimping piler. Verify the conductor is securely locked in the terminal and cannot be pulled out by hand.
5. Slide the heat-shrink tubing over the crimped joint, covering the crimp and a small part of the insulation. Apply heat evenly with a heat gun until the tubing shrinks tight and seals the joint completely.
6. Connect the L1, L2, L3, N lines and PE line to the cabinet.

**a. L1, L2, L3, N Lines:**


Press the terminal block with a screwdriver to hold the port open, then insert the L1, L2, L3, and N wires into the corresponding ports.

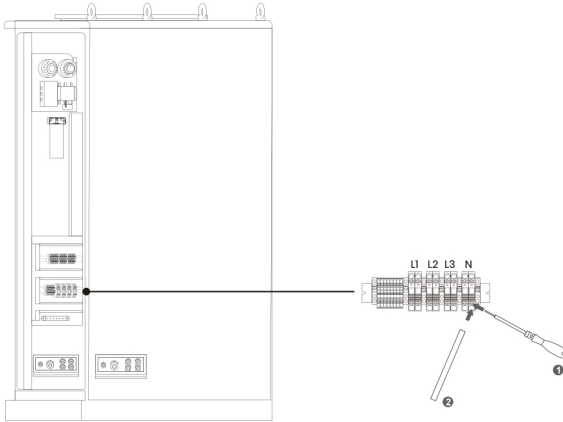

Port	Description
L1: 1-2	Connect to L1 phase of auxiliary power supply, 3P-380V/400V
L2: 3-4	Connect to L2 phase of auxiliary power supply, 3P-380V/400V
L3: 5-6	Connect to L3 phase of auxiliary power supply, 3P-380V/400V
N: 7-8	Connect to N phase of auxiliary power supply

**b. PE Line:**

Use screws to secure the PE line to the ground bus-bar with an insulated torque socket wrench. **Recommended torque: 6 N-m.**


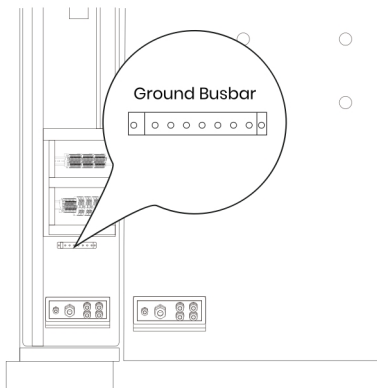


Internal Left Side View

The following figure illustrates the complete wiring layout of the cabinet for reference.

**NOTE**


- The inverter interface layout shown in this diagram is for reference only. All wiring and connections must be performed in accordance with the actual terminal markings and technical specifications on the actual product.

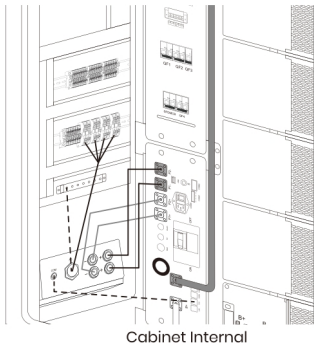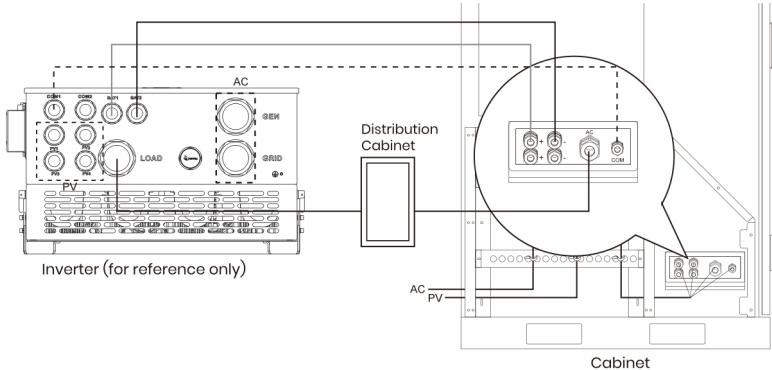


# 5.4 Multi-System Connection

## 5.4.1 Communication between cabinets

1. Connect the first cabinet to the inverter using the provided communication cable, as described in section [5.3.4 Communication Cable](#).
2. Connect one end of a second communication cable to the **HVBOUT port** of the first cabinet, and the other end to the **HVBIN port** of the second cabinet. Repeat this procedure for any additional cabinets.

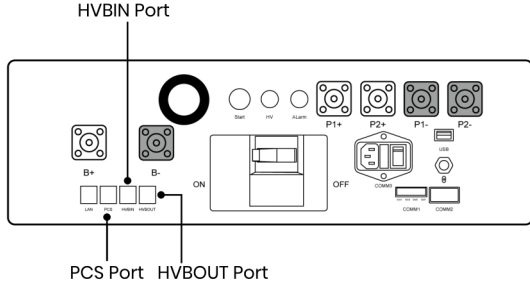


3. For the final cabinet, use the Terminal Resistor to block the **HVBOUT Port**.

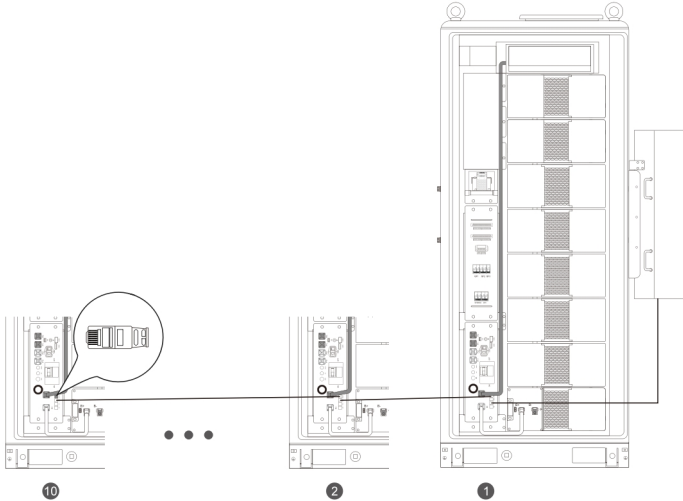


### 5.4.2 Power transfer between cabinets

1. Connect the positive and negative power cables of the first cabinet to the inverter. For detailed steps, refer to section [5.3.3 Power Cable](#).
2. Connect the quick-fit connector of a second positive or negative power cable to the P+ or P- port on the first cabinet.
3. Route the cables through the cable inlet of the first cabinet and into the second cabinet cable inlet.
4. Install the supplied quick-fit connector onto the OT/DT terminal of the positive or negative power cables as follows:

 - a. Disassemble the quick-fit connector as follows.



 
- b. Route the cable through the plug backshell first, then through the rear sealing boot, positioning both components along the cable away from the end to be processed.




- c. Strip the insulation from the end of the cable. Recommended Stripping Length: **19 mm**.



 
- d. Insert the stripped cable conductor fully into the terminal contact cavity of the connector plug. Tighten the plug backshell to complete the assembly.



5. Insert the installed quick-fit connector to the P+ or P- port on the second cabinet.

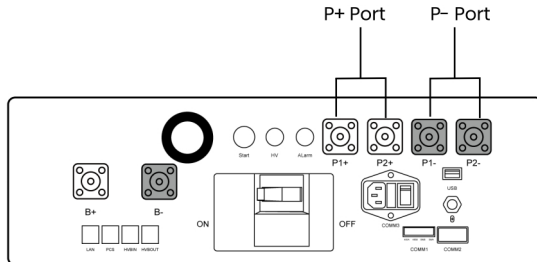

6. Repeat **Step 2-5** for any additional cabinets.
7. For the final cabinet, connect its positive and negative power cables to the cabinet's P+/P- ports. Route the cables through all intermediate cabinets toward the inverter, and finally connect to the inverter's BAT+ and BAT- ports.

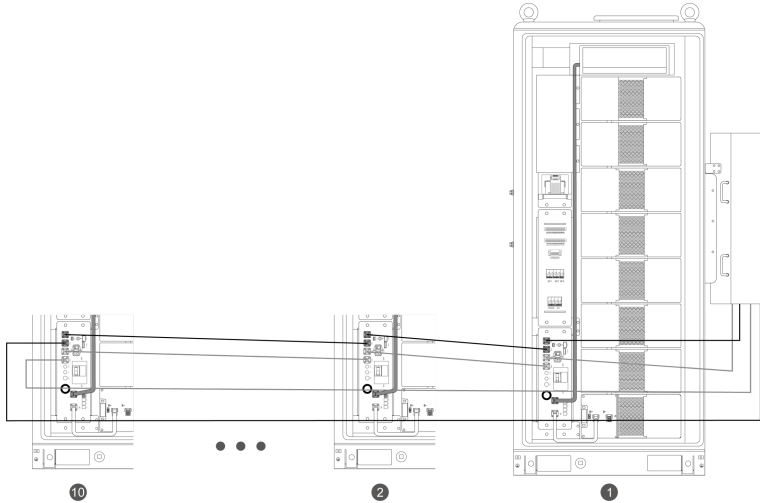


**Recommended Wiring Method for Auxiliary Power Paralleling:**

**NOTE**


- A maximum of 6 units can be connected per phase. The system supports up to 10 parallel units; exceeding this limit may degrade communication quality.
- If not more than 6 units are to be installed, two wiring options are available (as shown below). The first wiring method is recommended for future parallel expansion to ensure current balance.

**For cabinets < 7:**


➤ 2 cabinets:

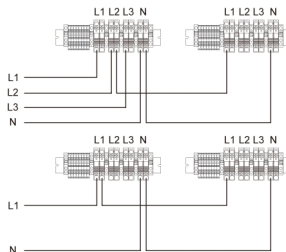


➤ 3 cabinets:

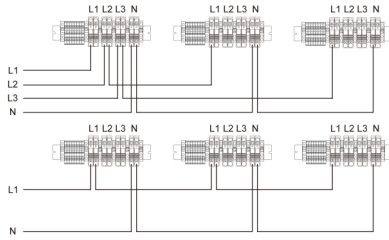

➤ 4 cabinets:

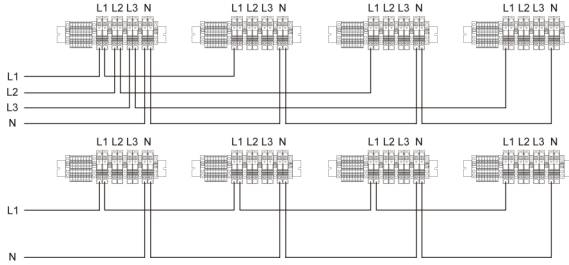


➤ 6 cabinets:

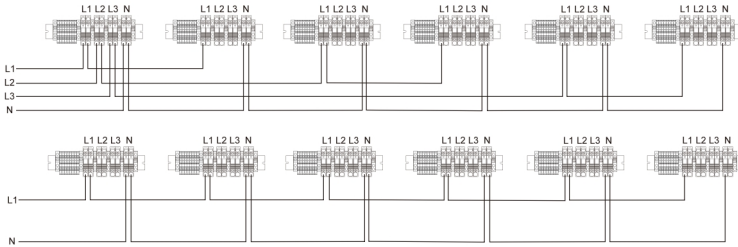


**For cabinets ≥ 7:**

 ➤ 9 cabinets



➤ 10 cabinets

 


## 5.5 Post Connection Procedures

### 5.5.1 Complete Cable Cover Installation

#### NOTE

- This section describes the final steps after wiring. The detailed Cable Cover installation procedure has been fully covered in [4.3.4 Install the Cable Cover](#).
1. After completing all electrical connections, check all cables are connected securely.
  2. Use the supplied **Cable Ties** to organize cables and secure them to the cable management rails.
  3. Tighten the cable gland at the cabinet cable inlet.

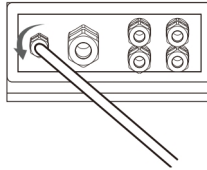

4. Install the **Angled Side Panel** and **Front Cover** to protect against rain and snow.


### 5.5.2 Apply Fire-Proof Mud



#### CAUTION

- The fire-proof mud must be applied only when routing cables through the cabinet bottom.
- Before applying the fire-proof mud, pull the cables slightly by hand to ensure the cables are securely connected.

After completing the wiring, use the fire-proof mud to seal the bottom cable inlet. Only the holes through which cables have been routed need to be sealed.

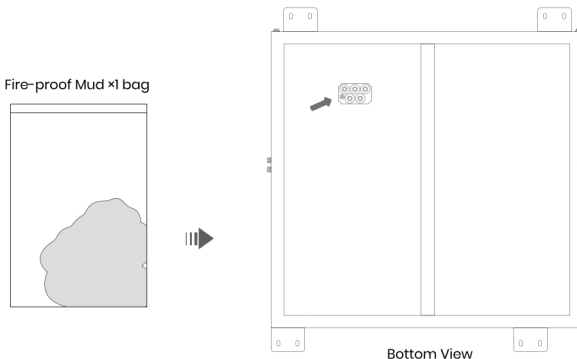

# 6 Operation

## 6.1 Check Before Power-On

No.	Item	Criteria
1	Equipment Appearance	<ul style="list-style-type: none"> <li>● Equipment is intact, no rust or paint flake-off; Repair damaged paint if any.</li> <li>● Device labels are clear. Replace damaged labels if any.</li> <li>● Door lock of each cabinet functions properly.</li> </ul>
2	Cabinet Installation	<ul style="list-style-type: none"> <li>● Installation site and foundation meets design requirements.</li> <li>● Cabinet is level and secured by mounting feet.</li> <li>● Clearance around the cabinet meets requirements.</li> </ul>
3	Cabinet Grounding	<ul style="list-style-type: none"> <li>● Cabinet grounded correctly with the ground cable securely connected to the cabinet PE terminal.</li> </ul>
4	Switch/circuit breaker	<ul style="list-style-type: none"> <li>● All circuit breakers are in the "OFF".</li> <li>● All disconnectors are in correct position.</li> </ul>
5	Cable	<ul style="list-style-type: none"> <li>● Cables are intact with sheathings wrapped properly.</li> <li>● Cable specifications meet the requirements and terminals are prepared as required.</li> <li>● Cables are connected in designated positions</li> <li>● Labels at both ends of cables are clear.</li> <li>● Cables are placed properly and with slack at bending points to avoid stress.</li> <li>● Cables are routed neatly without twists or crossovers in the cabinets.</li> </ul>
6	Cable Inlet Sealing	<ul style="list-style-type: none"> <li>● Cable inlets are sealed using cable cover or fire-proof mud.</li> </ul>
7	Ventilation/Heat Dissipation	<ul style="list-style-type: none"> <li>● Fans and cooling vents are unobstructed.</li> <li>● Air conditioner functions properly.</li> </ul>

## 6.2 Power-On



### **DANGER**

- Wear insulated gloves and use insulated tools. Failure to do so will result in electric shock, short circuit, or death.
- Monitor the system during power-on. If any fault is detected, power off the system immediately, rectify the fault, then resume operation.




### **WARNING**

- If batteries are fully or over-discharged during installation or commissioning, charge them immediately. Delayed charging may cause permanent battery damage.
- If the system has been installed but not used for six months or longer, do not operate it. Professional inspection and testing are required before restart.
- After a circuit breaker trips, always investigate the root cause on the load side before resetting. Before re-closing a tripped circuit breaker, check the corresponding load side and confirm that no short circuit or other fault exists, as re-energizing without fault clearance may escalate hazards.

### **NOTE**

- Before power-on and long-term operation, remove all desiccants from the ESS and dispose of them according to local waste disposal regulations.
- Clear the equipment working area, and strictly prohibit unrelated personnel and animals from entering the operation range.
- Keep foreign objects, especially metal debris, away from the battery area to avoid short circuit risks.

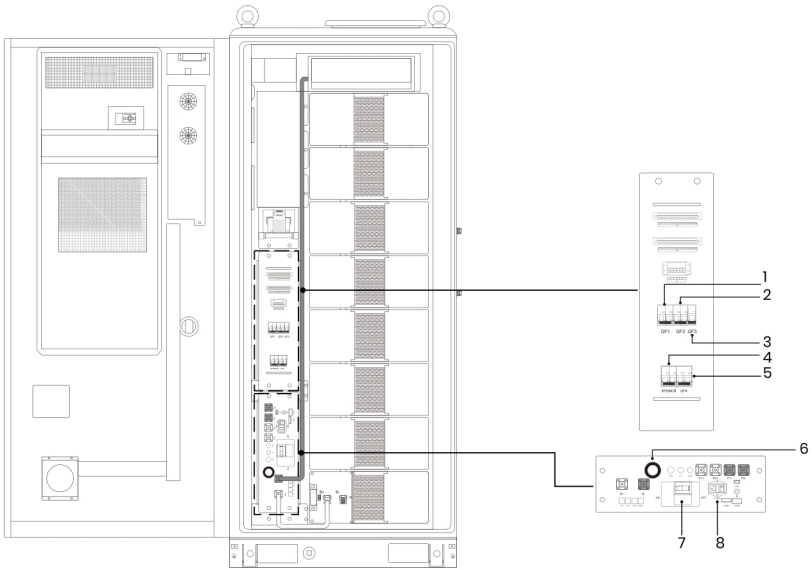

No.	Item	No.	Item
1	Circuit Breaker QF1	5	Circuit Breaker QF4
2	Circuit Breaker QF2	6	Start Button (PDU)
3	Circuit Breaker QF3	7	Circuit Breaker (PDU)
4	SPD MCB (Surge Protective Device and Miniature Circuit Breaker)	8	COMM3 (PDU)

**Step to power on the system:**

1. Flip up circuit breaker **QF1, QF2** and **QF4** on the power distribution area.
2. Flip up the integrated **SPD MCB** and circuit breaker **QF3** on the power distribution area.
3. Turn the **COMM3** to the "I" position and flip the **circuit breaker** on the PDU to the "ON" position.
4. Press the **start button** on the PDU.

## 6.3 Power-Off

### 6.3.1 Normal Power-Off Procedure

Step to power off the system:

1. Press the start button on the PDU.
2. Turn the **COMM3** to the “O” position and flip the **circuit breaker** on PDU to the “OFF” position.
3. Flip down the integrated **SPD MCB** and circuit breaker **QF3** on the power distribution area.
4. Flip down circuit breaker **QF1, QF2** and **QF4** on the power distribution area.


### 6.3.2 Emergency Power-Off Procedure



#### DANGER

- Do not use the EPO to stop the ESS during normal operation or when no emergency condition exists.
- Only after confirming that the fault has been completely cleared can you start the system again.

In an emergency, break the EPO cover and press EPO button to shut down the system immediately.

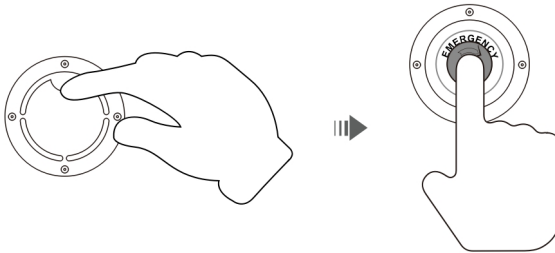

After troubleshooting, use a screwdriver to remove the broken cover, then replace it with a new cover plate and secure it with screws. The replacement transparent cover plate is included in the accessory kit.

# 7 Product Monitoring

## 7.1 DEYE Cloud Website

### NOTE

- The DEYE Cloud Website can be used to monitor your ESS system only if you have purchased a DEYE inverter.

1. Log in to the Deye Cloud website (<https://www.deyecloud.com/login>) using your account and password.
2. Enter the inverter collector's SN code in the search bar. The corresponding device information will be displayed in the table below. Click the device's SN code in the table to access the **Device Details Page**.
3. On the Device Details Page, click Architecture to navigate to the Inverter Architecture Page.
4. Then, click **Battery Module** to view the corresponding battery data.

## 7.2 DEYE Cloud APP

The device can connect to the Deye Cloud App via Bluetooth. After successful login and registration, you can view information about the entire system.

### Download the Deye Cloud App

Scan the correct code to download the app.



For Android



For iOS

For more detailed instructions on using the Deye Cloud App, refer to the operation manual by scanning the provided QR code.



# 8 Maintenance

## 8.1 Safety Precautions



### **DANGER**

- Maintenance shall be performed or supervised by qualified professional personnel.
- Wear personal protective equipment (PPE) and use dedicated insulated tools to avoid electric shocks or short circuits.
- Do not smoke or have open flames in the vicinity of the equipment.
- Do not wear jewelry, watches or other metallic accessories during maintenance.
- All battery terminals must be disconnected for maintenance.
- It is forbidden to dismantle, dissect or open the battery; no serviceable parts are contained inside the battery.
- Electrolyte released from a damaged battery is harmful to skin and eyes and may be toxic; do not touch it.



### **WARNING**

- Never maintain energized batteries. Disconnect mains power and batteries before moving or reconnecting the equipment, and wait 5 minutes until the equipment powers off. Verify no hazardous voltage remains with a multimeter before maintenance.
- Improper decommissioning may cause damage to equipment. Ensure the product is decommissioned in accordance with relevant provisions before maintenance.
- Keep the equipment clear of the cable preparation area. Cable scraps entering the equipment can cause sparks, resulting in personal injury or equipment damage.
- Do not clean the equipment with water or any solvent.



### **CAUTION**

- Place a warning sign at the switch stating that the switch must not be switched on.
- Use an electroscope of the proper voltage level to verify the equipment is completely de-energized.
- Before maintenance or repair, securely connect the circuit to be serviced to the main grounding system. Remove the grounding connection upon completion.
- Insert and remove cables in accordance with regulations; violent or forced operations are prohibited.

- Clean tools and materials promptly after maintenance, and check for any metallic objects left inside or on top of the product.
- When replacing batteries, use spare parts of the same type and specification.
- Charge your equipment in 48 hours after over-discharge.
- Contact the customer service center for any operation and maintenance queries; unauthorized operation is prohibited.

## 8.2 Maintenance Schedule

### NOTE

- Perform maintenance as required by site conditions.
- Ensure that the explosion vent panels are not blocked. Clear any debris from around these openings to prevent damage to the pressure relief devices during operation
- In sandstorm-prone areas, clean the air conditioner filter after each sandstorm with a high-pressure water gun.
- CO detector is recommended to be zeroed annually and calibrated every 2 years. Remote and on-site zeroing are available

Maintenance Item	Description	Frequency
Environment & Safety	Check that temperature and humidity inside the cabinet are within reasonable ranges.	3 months
	Ensure no flammable or explosive materials around the product.	6 months
	Ambient temperature and humidity within operating ranges.	6 months
	Check heat dissipation modules and vents; clean with a vacuum cleaner if necessary.	12 months
	Fire-resistant mud with good adhesion; foundation intact and smooth	12 months
Appearance & Structure	Check that status indicators are in normal condition.	1 day
	Ensure no foreign objects wrap or cover the product exterior.	1 day
	Check the air conditioner for radiator and clean the filter.	3 months
	Visual inspection of the product: no obvious paint peeling or rust, no dust at vents,	3 months

	fasteners secured, parameter settings normal	
	Check cabinet door lock and sealing strip; no foreign matter, dust or condensed water inside	12 months
	Check internal screws for no loss or rust	12 months
	Warning labels and marks legible and intact; replace if stained or damaged	12 months
Electrical & Connections	Cables: securely connected, undamaged, no water ingress, intact insulation tape at terminals, proper routing	6 months
	Reliable grounding and equipotential bonding	6 months
Battery Pack	Proper ambient temperature/humidity, normal operating voltage and current	3 months
	No rust or foreign objects; fan operates properly	6 months
Protection & Safety Devices	Verify normal function of EPO button and equipment shutdown switches	3 months
	Liquid cooling system: Normal operation, no pipe leakage, no abnormal noise	3 months
	Protective components: smoke/heat detectors, water leakage sensors, surge protective devices (SPD), fuses intact and functional	6 months

### 8.3 Post-Maintenance Requirements

After completing maintenance operations, follows the steps below to restore the site and archive the maintenance records:

Step	Operation
1. Cleaning & Restoration	Remove all temporary measures (e.g., grounding and warning signs) and wiring is restored to original condition. Prevent foreign objects from being left behind or personnel from inadvertently entering.
2. Power-up & Verification	Restore system power step by step per the power-up procedure. Verify that the system has no alarms and operating parameters are normal.
3. Recording & Archiving	Create traceable maintenance records, including the time, personnel and equipment status, and archive the records.

### 8.4 Storage

**NOTE**

- For long-term storage, keep the original packaging and check it regularly.



**WARNING**

- Keep the product far away from high-temperature heat sources, open flames, flammable and explosive areas, and all ignition sources, and do not expose it to direct sunlight or rain.
- During storage, ensure the product is completely disconnected from external equipment, with all operation indicators off.
- Store the product in a dry, clean, well-ventilated indoor area on flat, solid ground, away from strong infrared radiation, organic solvents, corrosive gases, and conductive metal dust.
- Handle with care. Dropping, collision, overturning, side placement, or tilting are strictly prohibited. Do not stack or roll the product improperly.
- Strictly comply with the storage requirements of the warning signs and other information on the packaging to avoid device damage.
- The storage area must be equipped with qualified fire-fighting facilities, including fire sand and special fire extinguishers.

## **ESS Cabinet Storage Requirements**

- **Storage Temperature:** 0°C ~ 35°C
- **Humidity:** 5% ~ 95% relative humidity, no condensing;
- **Altitude:** 3000 m

### **Long-Term Storage (> 6 months):**

- Replace desiccants with the same specifications and quantity regularly.
- Check the outer packaging every 3 months, and replace damaged packaging immediately.
- Storage duration is calculated from the latest charge date marked on the packaging. If the allowable storage period is exceeded, report to the person in charge immediately.
- Maintain temperature and humidity per the storage requirements.

Since the batteries have been installed in the cabinet in the factory, the following **battery storage requirements** should also be aided:

1. For long-term battery storage, keep the SOC no less than 50%, complete at least one charge-discharge cycle every 6 months, charge the battery in a timely manner, and calibrate the SOC to 50%. Low SOC storage is strictly prohibited to avoid battery damage caused by over-discharge.
2. Check the battery voltage monthly if stored for more than 6 months. Storage can be continued if the voltage is higher than 51.2V; charge immediately in accordance with the specified charging strategy if the voltage is lower than 51.2V.
3. To reduce self-discharge losses during extended storage, disconnect one terminal of the positive power cable from the high-voltage box. This action cuts off the internal 12V auxiliary power supply and minimizes battery depletion.
4. Long-term storage of lithium batteries will cause capacity attenuation, so overdue storage shall be avoided as much as possible. If the allowable storage period is exceeded, contact the qualified personnel for inspection and maintenance. Do not attempt to start or operate the equipment without prior inspection.

## 9 Technical Specifications

Model		GE-F112-BC-2-A3	GE-F128-BC-2-A3
Cell Type		LiFePO <sub>4</sub>	
Module Capacity (Ah)		314	
Module Nominal Voltage (Vdc)		51.2	
Module Energy (kWh)		16.08	
Module Qty In Series		7	8
System Nominal Energy (kWh)		112.53	128.61
System Usable Energy (kWh) <sup>1</sup>		112.53	128.61
System Nominal Voltage (Vdc)		358.4	409.6
System Operating Voltage (Vdc)		280 - 408.8	320 - 467.2
Rated DC Power (kW)		56	64
Charge/Discharge Current (A) <sup>2</sup>	Recommend	157	
	Max. Continuous	180	
	Peak discharge @15s/20~45°C	285	
Fire Protection System		Aerosol and Water fire interface, CO gas detection, Active exhaust and Explosion venting	
Cooling Method		Smart Air Cooling	
Communication Port		CAN, RS485	
Communication protocol		CAN2.0, Modbus, TCP/IP	
Operating Temperature (°C) <sup>3</sup>		-30 - 55	
Recommend Storage Temperature (°C)		0 - 35	
Humidity		5% - 95% RH (No Condensing)	
Altitude		3000m	
IP Protection		IP55	
Anti-Corrosion Level		C4-M	
Dimension (W x D x H, mm)		998 x 1240 x 2405.5	
Weight(kg)		1575	1690
Installation Location		Floor mount	
Cycle Life		≥8000 (25±2°C, 0.5P, EOL70%)	
Warranty		10 years	
Certification		UN38.3, CE, CB, IEC62933, ROHS, REACH	

<sup>1</sup> Test conditions: 100% DoD, 0.5P charge & discharge at 25°C. System usable energy may vary due to system configuration parameters.

<sup>2</sup> The current is affected by temperature and SOC.

<sup>3</sup> Derated operation at > 45°C

## Appendix I Troubleshooting

This section lists the fault codes and corresponding troubleshooting methods for the battery system. In the event of any fault, refer to the table below and follow the relevant troubleshooting recommendations. If the problem persists, contact after-sales service for further assistance.

<b>Code</b>	<b>Description</b>
F001	Total Voltage Too High
F002	Total Voltage Too Low
F003	Charge Temperature Too High
F004	Discharge Temperature Too High
F005	Charge Temperature Too Low
F006	Discharge Temperature Too Low
F007	Voltage Difference Too Large
F008	Temperature Difference Too Large
F009	Cell Overvoltage
F010	Cell Undervoltage
F011	Pre-charge Resistor Over-temperature
F012	BMS Connector Over-temperature
F013	BMU Connector Over-temperature
F014	Charge Current Fault
F015	Discharge Current Fault
F016	SOC Too High Fault
F017	Insulation Fault
F018	Heating Film Over-temperature Fault
F019	SOC Too Low Fault
F020	Discharge Relay Adhesion
F021	Positive Main Relay Adhesion
F022	Charge Relay Adhesion
F023	Heat Relay Adhesion
F024	Ultimate Protection
F025	Power Supply Voltage Abnormal
F026	Fuse Blown
F027	BMU Address Duplicate Fault
F028	BMS Address Duplicate Fault
F029	Internal CAN Communication Failure
F030	PCS CAN Communication Failure
F031	PCS RS485 Communication Failure
F032	PCS RS485 Communication Error
F033	Fuse Total Voltage Sampling Error
F034	Internal Total Voltage Sampling Error
F035	Motor Total Voltage Sampling Error

F036	Heating Total Voltage Sampling Error
F037	Voltage Sampling Fault
F038	Temperature Sampling Fault
F039	Current Sampling Fault
F040	Current Module Fault
F041	Positive Main Relay Drive Failure
F042	Charge Relay Drive Failure
F043	Discharge Relay Drive Failure
F044	Heat Relay Drive Failure
F045	EEPROM Storage Fault
F046	Pre-charge Failure
F047	Charge Voltage Too Low
F048	BMU Communication Fault
F049	BMU Quantity Abnormal
F050	BMS Connector Temperature Acquisition Error
F051	BMU Connector Temperature Acquisition Error
F052	Pack Thermal Runaway Fault
F053	Pack Fire Fault
F054	TCP Connection Failure
F055	W5500 SPI Communication Failure
F056	LC Communication Lost
F057	BMU AFE Communication Failure
F058	Bluetooth Initialization Failure
F059	Cell Type Mismatch
F060	Single Cluster Emergency Power-off
F061	Negative Main Fuse Blown
F062	Heating Abnormality
F063	Heating Fuse Blown
F064	Water Immersion Fault
F065	Dual Protection Board MOS Open Fault
F066	Arc Fault Detection Fault
F067	Arc Fault Detection Board Communication Lost
F068	System Self-check Completed
F069	Environmental Control Board AC Communication Loss Alarm
F070	Environmental Control Board AC General Alarm
F071	Environmental Control Board Lightning Protection Alarm
F072	Environmental Control Board Exhaust Valve Alarm
F073	Environmental Control Board Lead-acid Battery Alarm
F074	Environmental Control Board Cabin Combustible Gas Alarm
F075	Environmental Control Board Battery Door Open Fault
F076	Environmental Control Board Cabin Extinguishing Agent Feedback Fault
F077	Environmental Control Board Smoke Detector Fault
F078	Environmental Control Board Temperature Sensor Fault

F079	Environmental Control Board Cabin Combustible Gas Fault
F080	Environmental Control Board Emergency Stop Fault
F081	Environmental Control Board Water Immersion Fault
F082	Environmental Control Board Communication Loss Fault
F083	Environmental Control Board CO Detector Alarm

## Appendix II Emergency Handling



### **DANGER**

- In the event of natural disasters (earthquake, typhoon, flood, wildfire, etc.): Prioritize personnel safety, cut off power and stop the ESS immediately.
- Do NOT operate damaged equipment without professional inspection and qualified testing after the disaster.
- Keep away from waterlogged or fire-damaged units and contact our service engineers for professional handling.



### **WARNING**

- When the air intake/exhaust system is operating, do NOT face the exhaust vents under any circumstance.
- Refer to the user manual/product manual for product information. Do NOT open the cabinet door if internal safety cannot be guaranteed.

### ➤ **Fire/Explosion Hazards**

- Do not open the door. Evacuate immediately to at least 50 meters away from the site and call the fire department.
- Wear respiratory protection. Disconnect the upstream power supply only when safe.
- Isolate the accident area only when safe to keep unauthorized personnel away.
- Post-incident maintenance must be performed by professionals or our after-sales engineers.

### ➤ **Electric Shock**

- Ensure personal safety, then disconnect the power supply immediately to avoid secondary electric shock.
- Use an insulated object to separate the victim from the power source and perform first aid such as cardiopulmonary resuscitation (CPR).
- Call the emergency medical number immediately to obtain professional medical treatment.
- Protect the accident scene for investigation and evidence preservation.
- Contact professionals to conduct a comprehensive inspection of the ESS. The system may only be put back into use after repair or replacement and passing qualified testing.

➤ **Chemical Hazards**

- In case of electrolyte leakage, evacuate personnel from the affected area and notify the relevant personnel immediately. Professionals shall conduct safe collection and proper disposal of leaked substances.
- Toxic gases may be released during battery combustion or damage; evacuate personnel to a safe area immediately. If personnel are exposed or injured, call the emergency medical number for professional treatment. Respiratory protection, protective clothing and other safety equipment must be worn during hazard handling.

➤ **Mechanical Injury**

- In the event of equipment tipping, battery pack dropping or component detachment, disconnect power and stop ESS operation immediately.
- In case of personnel injury, administer first aid (hemostasis, bandaging, etc.) and call the emergency medical number immediately.
- If obvious odor, damage, smoke or fire is detected, evacuate personnel immediately, call the fire department, and allow professionals to handle firefighting and subsequent treatment.
- If any abnormalities are observed, professionals shall use move the battery pack to an open, safe area, let it stand for 1 hour while monitoring temperature, and contact the engineers.
- Contact professionals to repair or replace damaged components. The system may only be returned to service after passing inspection and testing.

➤ **Natural Disasters**

- In the event of natural disasters including earthquake, typhoon, flood, wildfire, etc., disconnect the power supply and stop ESS operation immediately.
- If the ESS is submerged or flooded, do not touch the equipment and keep clear of the waterlogged area.
- Do not use water-soaked batteries under any circumstances. Contact a qualified battery recycling service for proper disposal and scrapping.
- Before a wildfire approaches, establish a firebreak around the ESS and prepare adequate fire-fighting equipment such as fire extinguishers, fire sand, fire hoses, etc.
- After the disaster, contact professionals to fully inspect the support structure, electrical connections, etc. The system may only be reused after repair/replacement and qualified testing.

# Appendix III Electrochemical Performance and Durability

## Parameters

Parameters	Value	Test method
Rated Capacity	314Ah	Actual measurement@25°C±3°C ①0.5C charge ②rest30min ③0.5C discharge
Capacity Fading	8000 Cycles, fade≤30%	Actual measurement@25°C±3°C ①0.5C charge ②rest30min ③0.5C discharge, 90%DOD
Power	8038W	@25°C±3°C charge and discharge@ 20%~80%SOC
Power Fading	10 years, fade≤30%	/
Internal Resistance	≤0.0013Ω	Actual measurement@25°C±3°C ①0.5C CC 3.65V,CV 0.05C, Cut ② Discharge to 50%SOC, rest 3h, V0 ③ discharge 0.5C, 10s, V1 ④(V0-V1)/I57
Increased internal Resistance	10 years, Increased≤30%	/
Energy efficiency	95%	Actual measurement@25°C±3°C ①0.5C CC 3.65V ②Discharge to 2.5V, E0 ③0.5C CC 3.65V, E1 ④E0/E1
Energy efficiency Fading	10 years, fade≤3%	/
Cycle Life	≥8000@70%SOH, 10 years	Actual measurement@25°C±3°C ①0.5C charge ②rest30min ③0.5C discharge, 90%DOD